


## Luminet<sup>SM</sup> Television Equipment

### Amino Willow Remote–Luminet<sup>SM</sup> Video Service Only

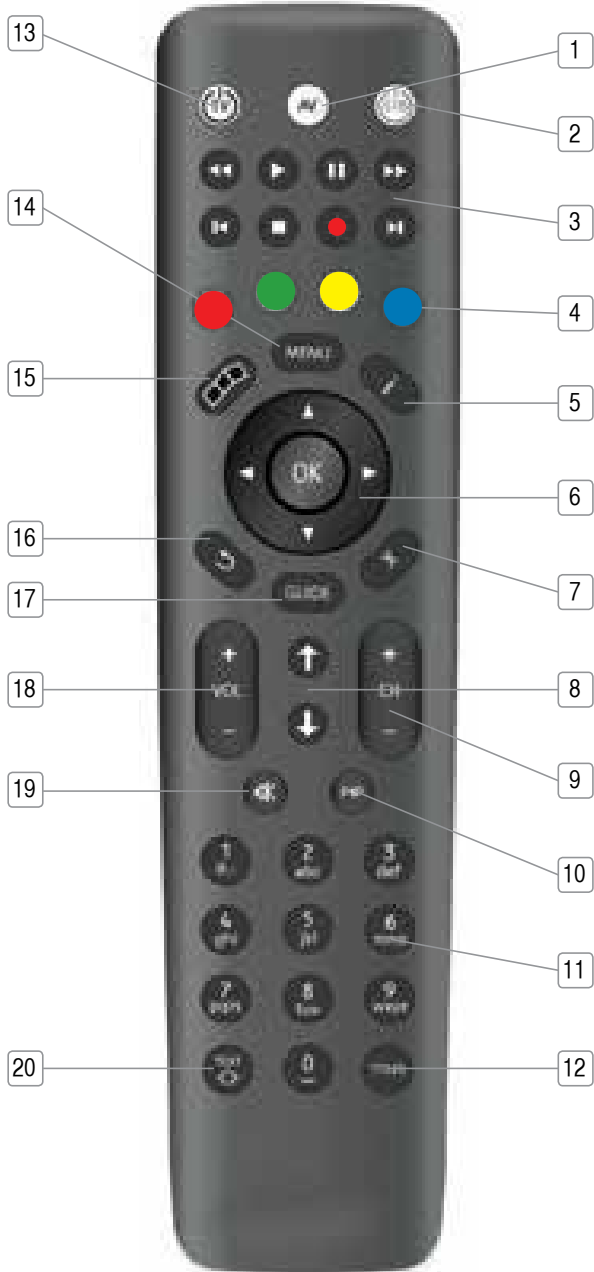

- 1 TV AV Source Select Button
- 2 STB Standby Button
- 3 STB PVR Transport Buttons
- 4 Color Navigation Buttons
- 5 Information Button
- 6 Navigation and OK Buttons
- 7 Exit Button
- 8 Page Up and Page Down Buttons
- 9 Channel Up and Channel Down Buttons
- 10 Previous Channel Select Button
- 11 Channel Select Buttons and Text Entry
- 12 Subtitles Button
- 13 TV Standby Button
- 14 STB Menu Button
- 15 PVR Button
- 16 Back Button
- 17 Electronic Program Guide Button
- 18 Volume Up and Down Buttons
- 19 Mute Button
- 20 Teletext Button (Press and Release) and TV SHIFT Function (Press and Hold)

### There are two ways you can Program your Remote:

- Program your remote using the Brand Search Method.
- Program your remote using the Auto Search Method.

- When a button on the remote is pressed either the set-top box standby button will flash (or TV standby button if a TV brand has been entered) depending on which product is being controlled by the remote control. If a button is pressed for more than 30 seconds the remote control will stop transmitting commands in order to preserve battery life.


### TV Control Setup: Brand Search Method

1. The remote control can be programmed to operate certain functions of your TV set. To program this functionality, perform the following instructions in sequence. In case of a mistake, the process can be exited at any point by pressing and holding the **TEXT/SHIFT** button and then at the same time pressing the **STOP** button. The remote control will revert to normal operation and no TV brand code will be stored.
2. Determine the manufacturer of your TV set.
3. Look up the 4-digit manufacturer code supplied following these instructions and make a note of this code.

TV Setup code Number

4. Make sure your TV set is turned on. (The set-top box does not need to be turned on to perform this programming feature).
5. Press and hold both the **1** and the **3** buttons at the same time on the remote control for approximately 3 seconds until the **TV Standby** button remains lit, then release both buttons.
6. Now enter the 4-digit manufacturer code for your TV set. On each digit entry the **TV Standby** button will flash. On entry of the 4th digit the TV standby button will flash then remain lit.
7. Point the remote control at the TV set and press and hold down the **TV Standby** button or the **MUTE** button on the remote control.
8. When the TV either turns off or brings up the **MUTE** symbol on screen, then release that button. This may take a few minutes to happen.
9. Press and hold the **TEXT/SHIFT** button and then at the same time press the **STOP** button to finish setting up the TV control mode. The **TV Standby** button will go out. The TV control function is now programmed into the remote control.

### The Following Buttons Should now Operate the TV set:

-  - **TV Standby**
- **AV** - **AV Source Select**
-  - **Vol +**, **Vol -** and **MUTE**

- If not all the above mentioned buttons operate the TV set then a Key Fix operation can be performed.

- Should the TV model be changed and the remote control requires re-programming then repeat the above setup procedure with the new TV. Should the TV brand be not successfully found by the remote control then the TV standby button will flash rapidly and the remote control will revert to normal operation. No TV brand code will be stored.

### TV Control Setup: Auto Search Method

Should the TV brand not be successfully found by the previous Brand Search Method then the Auto Search Method can be used.

- Please note this process may take up to 5 minutes to find your TV code.

1. Make sure your TV set is turned on. (The set-top box does not need to be turned on to perform this programming feature).
2. Press and hold both the **1** and the **3** buttons at the same time on the remote control for approximately 3 seconds until the **TV Standby** button remains lit, then release both buttons.
3. Point the remote control at the TV set and press and hold down the **TV Standby** button or the **MUTE** button on the remote control.
4. When the TV either turns off or brings up the **MUTE** symbol on screen, then release that button. This may take up to 5 minutes to happen.
5. Press and hold the **TEXT/SHIFT** button and then at the same time press the **STOP** button to finish setting up the TV control mode. The **TV Standby** button will go out. The TV control function is now programmed into the remote control.

- Should the TV brand be not successfully found by the remote control then the TV standby button will flash rapidly and the remote control will revert to normal operation. No TV brand code will be stored. If even Auto Search Method fails to successfully setup operation of the TV set, then the remote is unable to control that particular TV set.

## TV Shift Functionality

When a TV brand has successfully been programmed into the remote contro, the following additional buttons may also control the TV set. These can be accessed by pressing and holding the **TEXT/SHIFT** button on the remote control and at the same time pressing: digit buttons **0..9**, **LEFT/RIGHT** ◀▶, **UP/DOWN** ▲▼, **OK**, **CH+/-** and the four color navigation buttons.

- Operation of these buttons is not guaranteed to control the normally expected functionality of the TV set.

## Key fix

If not all the previously mentioned buttons operate the TV set then a Key Fix operation can be performed as follows:

1. Press and hold the **1** and **9** buttons simultaneously for approximately 3 seconds until the **TV Standby** ⏻ button is lit.
2. Try all the above mentioned TV buttons.
3. If the TV does not respond to a button, then hold that button down permanently. The remote control will now step through alternative settings. When the TV responds correctly then release that button.
4. Repeat that procedure for other buttons if necessary
5. Once finished, press **TEXT/SHIFT** and **STOP** ■ at the same time

## Removing TV Functionality

To reset the remote control and erase the TV functionality:

1. Press and hold the **1** and **6** buttons simultaneously for approximately 3 seconds until the **TV Standby** ⏻ button is lit.
2. Enter the following key sequence in the correct order **9, 9, 6**.
3. The TV settings will be deleted from the remote control.

## AMINO WILLOW CODES

A.R. SYSTEMS 0012	AMOI 0132	AWA 0296	BRILLIAN 0422
ABEX 0014	AMPLIVISION 0138	AXXON 0303	BRINKMANN 0423
ABS 0016	AMPRO 0139	BAIRD 0311	BRIONVEGA 0424
ACCENT 0019	AMSTRAD 0140	BANG AND OLUFSEN 0314	BRITANNIA 0425
ACER 0028	ANAM 0146	BARCO 0319	BROCKWOOD 0430
ACOUSTIC SOLUTIONS 0032	ANAM NATIONAL 0147	BASIC LINE 0325	BROKSONIC 0432
ACTION 0033	ANDERSSON 0148	BASTIDE 0327	BRUNS 0435
ACURA 0036	ANGLO 0151	BAUR 0331	BSKYB 0436
ADA 0038	ANITECH 0154	BAYSONIC 0333	BSR 0437
ADC 0040	ANSONIC 0156	BAZIN 0335	BTC 0439
ADDISON 0043	AOC 0165	BEAUMARK 0340	BUSH 0445
ADMIRAL 0046	APEX DIGITAL 0170	BEIJING 0345	BYD:SIGN 0448
ADVENT 0054	APOLLO 0171	BEKO 0346	C-TECH 0449
ADVENTURA 0055	APPLE 0172	BELCOR 0348	CAIHONG 0462
ADYSON 0058	ARC EN CIEL 0178	BELL AND HOWELL 0350	CAISHI 0465
AEG 0059	ARCAM 0179	BELSON 0355	CANDLE 0480
AGASHI 0063	ARDEM 0184	BELSTAR 0357	CAPSONIC 0486
AGB 0064	ARISTONA 0192	BENQ 0359	CARAD 0488
AIKO 0069	ART 0199	BEON 0361	CARENA 0489
AIM 0070	ARTHUR MARTIN 0200	BERTHEN 0363	CARNIVALE 0491
AIWA 0072	ASA 0202	BEST 0364	CARREFOUR 0492
AKAI 0074	ASBERG 0205	BESTAR 0368	CARVER 0494
AKASHI 0075	ASTAR 0218	BESTAR-DAEWOO 0369	CASCADE 0496
AKIBA 0078	ASTRA 0221	BINATONE 0378	CASIO 0499
AKIRA 0079	ASUKA 0227	BLACK DIAMOND 0384	CATHAY 0501
AKITO 0082	ATD 0229	BLACK STAR 0386	CCE 0504
AKURA 0083	ATLANTIC 0233	BLACKWAY 0388	CELEBRITY 0509
ALARON 0085	ATORI 0237	BLAUPUNKT 0390	CELERA 0510
ALBA 0086	AUCHAN 0240	BLUE SKY 0395	CELESTIAL 0511
ALBATRON 0087	AUDIOSONIC 0264	BLUE STAR 0396	CENTREX 0516
ALCYON 0093	AUDIOTON 0266	BOCA 0399	CENTRUM 0519
ALIENWARE 0099	AUDIOVOX 0268	BONDSTEC 0403	CENTURION 0520
ALLORGAN 0105	AUDIOWORLD 0269	BOOTS 0405	CENTURY 0521
ALLSTAR 0108	AUSIND 0276	BPL 0413	CGE 0523
AMERICA ACTION 0123	AUTOVOX 0280	BRADFORD 0414	CHANGCHENG 0526
	AVENTURA 0287	BRANDT 0416	



CHANGFEI 0527	DIGIHOME 0758	FERGUSON 0996	HANSEATIC 1190
CHANGFENG 0528	DIGILINE 0759	FIDELITY 0998	HANTAREX 1192
CHANGHAI 0529	DIGITAL LIFE 0772	FILSAI 1000	HANTOR 1193
CHANGHONG 0530	DIGITEX 0780	FINLANDIA 1003	HARLEY DAVIDSON 1197
CHUN YUN 0545	DIGITOR 0781	FINLUX 1004	HARMAN/KARDON 1198
CHUNFENG 0546	DIRECTV 0794	FIRSTLINE 1008	HARVARD 1202
CHUNG HSIN 0547	DIXI 0807	FISHER 1009	HARWA 1203
CHUNSUN 0549	DL 0810	FLINT 1014	HARWOOD 1204
CIMLINE 0552	DOMEOS 0817	FNR 1016	HAUPPAUGE 1206
CINEX 0563	DONGDA 0820	FORMENTI 1023	HAVERMY 1208
CITIZEN 0567	DONGHAI 0821	FORMENTI-PHOENIX 1024	HCM 1210
CITY 0569	DREAN 0832	FORTRESS 1027	HELIOS 1219
CLARION 0575	DSE 0833	FRABA 1030	HELLO KITTY 1221
CLARIVOX 0576	DTS 0837	FRIAC 1040	HEMA 1222
CLATRONIC 0581	DUAL 0838	FRONTECH 1042	HEMMERMANN 1223
CLAYTON 0582	DUMONT 0840	FUJITSU 1052	HEWLETT PACKARD 1229
CMS 0590	DURABRAND 0842	FUJITSU GENERAL 1053	HIFIVOX 1233
CMS HIGHTEC 0591	DUX 0843	FUJITSU SIEMENS 1054	HIGASHI 1234
COBY 0597	DVX 0847	FUNAI 1056	HIGHLINE 1236
COMMERCIAL SOLUTIONS 0615	DWIN 0848	FURICHI 1058	HIKONA 1237
CONCERTO 0625	DX ANTENNA 0849	FUTRONIC 1061	HINARI 1243
CONCORDE 0626	DYNATRON 0855	FUTURETECH 1064	HISAWA 1247
CONDOR 0627	EASY LIVING 0860	GALAXI 1068	HISENSE 1249
CONIA 0628	ECCO 0864	GALAXIS 1069	HITACHI 1251
CONROWA 0634	ECE 0865	GATEWAY 1076	HITACHI FUJIAN 1252
CONTEC 0635	ELBE 0880	GBC 1078	HITEC 1253
CONTINENTAL EDISON 0637	ELCIT 0883	GE 1081	HITSU 1257
COSMEL 0647	ELECTROBAND 0888	GEANT CASINO 1082	HOEHER 1262
CRAIG 0650	ELECTROGRAPH 0889	GEC 1083	HONGMEI 1272
CROSLEY 0655	ELECTROHOME 0890	GELOSO 1087	HORNYPHON 1277
CROWN 0658	ELEKTRA 0896	GENERAL TECHNIC 1095	HOSHAI 1278
CS ELECTRONICS 0663	ELFUNK 0899	GENESIS 1096	HOWARD COMPUTERS 1281
CTC 0664	ELG 0900	GENEXXA 1097	HP 1283
CTX 0665	ELIN 0902	GIANT 1113	HUAFA 1287
CURTIS 0666	ELITE 0903	GIBRALTER 1114	HUANGHAIMEI 1288
CURTIS MATHES 0667	ELMAN 0907	GO VIDEO 1126	HUANGHE 1289
CXC 0670	ELTA 0910	GOLDFUNK 1135	HUANGLONG 1290
CYBERPOWER 0674	EMERSON 0917	GOLDHAND 1136	HUANGSHAN 1291
CYBERTRON 0675	EMPEROR 0921	GOLDLINE 1138	HUANYU 1292
CYTRON 0680	EMPRES 0922	GOLDSTAR 1140	HUARI 1294
D-VISION 0684	ENVISION 0933	GOODMANS 1142	HUMAX 1298
DAEWOO 0692	ENZER 0934	GORENJE 1144	HUSH 1304
DAINICHI 0694	EPSON 0937	GP 1147	HYGASHI 1308
DANSAI 0699	ERRES 0942	GPM 1149	HYPER 1309
DANTAX 0702	ESA 0943	GPX 1150	HYPSON 1312
DATSURA 0703	ESC 0945	GRADIENTE 1151	HYUNDAI 1315
DAWA 0707	ETRON 0949	GRAETZ 1152	IBERIA 1320
DAYTRON 0710	EUROFEEL 0954	GRANADA 1154	IBUYPOWER 1322
DE GRAAF 0716	EUROLINE 0955	GRANDIN 1156	ICE 1324
DEC 0717	EUROMAN 0956	GRONIC 1160	ICES 1325
DECCA 0718	EUROPA 0957	GRUNDIG 1162	ILO 1341
DEITRON 0722	EUROPHON 0959	GRUNKEL 1164	IMPERIAL 1346
DELL 0725	EVESHAM 0972	GRUNPY 1165	INDESIT 1349
DENON 0731	EVOLUTION 0973	HAAZ 1172	INDIANA 1350
DENVER 0733	EXCELLO 0975	HAIER 1175	INFINITY 1352
DESMET 0738	EXPERT 0976	HAIHONG 1176	INFOCUS 1353
DIAMANT 0746	EXQUISIT 0978	HALIFAX 1179	INGELEN 1354
DIAMOND 0747	FEILANG 0990	HALLMARK 1180	INGERSOL 1355
DIAMOND VISION 0748	FEILU 0991	HAMPTON 1183	INITIAL 1356
DICK SMITH ELECTRONICS 0750	FEIYUE 0993	HANKOOK 1188	INNO HIT 1358
DIGATRON 0751	FENNER 0994	HANNSPREE 1189	INNOVA 1359

INNOVATION 1360	KONKA 1548	MCMICHAEL 1768	NEWAVE 1981
INOTECH 1364	KORPEL 1552	MECK 1775	NICAMAGIC 1994
INSIGNIA 1368	KORTING 1554	MEDIA CENTER PC 1777	NIKKAI 1998
INTEQ 1373	KOSMOS 1557	MEDIATOR 1784	NIKKEI 1999
INTERBUY 1376	KOYODA 1561	MEDION 1787	NIKKO 2000
INTERFUNK 1377	KTV 1572	MEDISON 1788	NINTAUS 2006
INTERNAL 1379	KUNLUN 1578	MEGAPOWER 1791	NIVEUS MEDIA 2012
INTERNATIONAL 1380	KURO 1579	MEGATRON 1795	NOBLEX 2013
INTERVISION 1386	KYOSHU 1583	MEI 1796	NOBLIKO 2014
IRRADIO 1396	KYOTO 1585	MELVOX 1799	NOGAMATIC 2016
IRT 1397	LANDS ELECTRONIC 1588	MEMOREX 1800	NOKIA 2017
ISUKAI 1402	LASAT 1597	MEMPHIS 1802	NORCENT 2020
ITC 1404	LAVIS 1602	MERCURY 1804	NORDIC 2021
ITS 1405	LECSON 1606	MERMAID 1806	NORDMENDE 2022
ITT 1406	LENCO 1615	METRONIC 1809	NORMEREL 2024
ITT NOKIA 1407	LENOIR 1617	METZ 1810	NORTHGATE 2027
ITV 1408	LESA 1622	MGA 1811	NORWOOD MICRO 2029
JANEIL 1414	LEXSOR 1626	MICROMAXX 1822	NOVATRONIC 2035
JBL 1420	LEYCO 1627	MICROSOFT 1826	NTC 2045
JCB 1421	LG 1628	MICROSTAR 1827	NU-TEC 2048
JEAN 1424	LIESENK AND TTER 1630	MICROTEK 1829	NUVISION 2053
JEC 1426	LIESENKOTTER 1631	MIDLAND 1831	OCEANIC 2061
JENSEN 1429	LIFETEC 1633	MIKOMI 1833	OKANO 2065
JIAHUA 1435	LINKSYS 1640	MINATO 1835	OLEVIA 2067
JINFENG 1438	LLOYD'S 1648	MIND 1837	OMNI 2074
JINHAI 1439	LOCAL INDIA TV 1653	MINERVA 1838	ONIDA 2081
JINXING 1442	LOCAL MALAYSIA TV 1656	MINOKA 1840	ONIMAX 2082
JMB 1445	LODOS 1659	MINTEK 1845	ONWA 2087
JNC 1446	LOEWE 1660	MINUTZ 1847	OPERA 2090
JOCEL 1448	LOGIK 1661	MITSUBISHI 1855	OPPO 2092
JUBILEE 1460	LOGIX 1663	MIVAR 1857	OPTIMUS 2095
JVC 1464	LUMA 1674	MONIVISION 1872	OPTOMA 2097
KAISUI 1471	LUMATRON 1676	MORGAN'S 1875	OPTONICA 2099
KAMP 1475	LUX MAY 1680	MOTION 1877	ORBIT 2103
KANGCHONG 1476	LUXMAN 1682	MOTOROLA 1878	ORION 2111
KANGHUA 1477	LUXOR 1683	MTC 1889	ORLINE 2113
KAPSCH 1483	LXI 1686	MTEC 1890	ORMOND 2114
KARCHER 1484	M ELECTRONIC 1688	MTLOGIC 1892	ORSOWE 2116
KATHREIN 1486	MADISON 1698	MUDAN 1896	OSAKI 2118
KAWA 1487	MAG 1701	MULTISTANDARD 1904	OSIO 2121
KAWASHO 1489	MAGNADYNE 1702	MULTITEC 1906	OSO 2122
KDS 1494	MAGNAFON 1703	MULTITECH 1907	OSUME 2123
KEC 1496	MAGNASONIC 1704	MURPHY 1911	OTIC 2125
KEN BROWN 1499	MAGNAVOX 1706	MUSIKLAND 1915	OTTO VERSAND 2126
KENDO 1500	MAGNIN 1708	MYRYAD 1922	PACIFIC 2135
KENNEDY 1504	MAGNUM 1709	NAD 1926	PACKARD BELL 2138
KENNEX 1505	MAJESTIC 1713	NAIKO 1930	PAEL 2140
KENWOOD 1507	MANDOR 1717	NAKIMURA 1933	PALLADIUM 2145
KHIND 1511	MANESTH 1718	NAONIS 1936	PALSONIC 2147
KIC 1512	MANHATTAN 1719	NAT 1941	PANAMA 2149
KINGSLEY 1520	MARANTZ 1724	NATIONAL 1942	PANASONIC 2153
KIOTA 1522	MARELLI 1729	NEC 1950	PANAVISION 2154
KIOTO 1523	MARK 1731	NECKERMANN 1951	PANDA 2155
KITON 1525	MASCOM 1738	NEI 1952	PATHE CINEMA 2168
KLH 1529	MASTRO 1743	NESCO 1960	PATHE MARCONI 2169
KLL 1531	MASUDA 1744	NETSAT 1966	PAUSA 2171
KLOSS 1532	MATSUI 1750	NETTV 1967	PENG SHENG 2181
KNEISSEL 1535	MATSUSHITA 1751	NETWORK 1968	PENNEY 2182
KOLIN 1541	MAXDORF 1756	NEUFUNK 1970	PERDIO 2185
KOLSTER 1543	MAXENT 1757	NEW TECH 1979	PERFEKT 2186
KONIG 1547	MAXIM 1759	NEW WORLD 1980	PETTERS 2189



PHILCO 2192	REFLEX 2368	SIAREM 2573	SUSUMU 2797
PHILHARMONIC 2194	RELISYS 2374	SIEMENS 2574	SUTRON 2798
PHILIPS 2195	REMOTEC 2377	SIERA 2576	SVA 2800
PHOCUS 2198	REOC 2379	SIESTA 2577	SVASA 2801
PHOENIX 2199	REVOX 2383	SIGNATURE 2582	SWISSTEC 2806
PHONOLA 2201	REX 2385	SILVA 2591	SYDNEY 2808
PHONOTREND 2202	RFT 2386	SILVA SCHNEIDER 2592	SYLVANIA 2809
PILOT 2207	RHAPSODY 2387	SILVER 2594	SYMPHONIC 2810
PIONEER 2212	RICAVISION 2388	SILVERCREST 2595	SYNCO 2811
PIONIER 2213	RINEX 2392	SIMPSON 2598	SYNTAX 2814
PLANTRON 2219	ROADSTAR 2398	SINGER 2599	SYSLINE 2815
PLAYSONIC 2224	ROBOTRON 2401	SINOTEC 2600	SYSTEMAX 2817
POLAROID 2230	ROLSON 2410	SINUDYNE 2601	SYTONG 2820
POPPY 2236	ROWA 2416	SKANTIC 2605	TACICO 2823
PORTLAND 2238	ROYAL LUX 2420	SKY 2610	TACTUS 2825
POWERPOINT 2241	RUNCO 2423	SKYSONIC 2627	TAGAR SYSTEMS 2831
PRECISION 2244	SABA 2429	SKYWORTH 2631	TAISHAN 2835
PREMIER 2248	SAGEM 2434	SLX 2638	TALENT 2838
PRESIDENT 2250	SAISHO 2437	SOGERA 2649	TANDBERG 2842
PRIMA 2253	SAIVOD 2439	SOLAVOX 2654	TANDY 2843
PRINCETON 2258	SALORA 2443	SOLE 2655	TASHIKO 2850
PRINSTON 2259	SAMBERS 2445	SONAWA 2663	TATUNG 2852
PRINZ 2260	SAMPO 2446	SONIKO 2669	TCL 2856
PRISM 2261	SAMSUNG 2448	SONITRON 2671	TCM 2857
PROFEX 2269	SAMSUX 2449	SONNECLAIR 2673	TEAC 2860
PROFILO 2272	SANDRA 2454	SONOKO 2675	TEC 2861
PROFITRONIC 2273	SANSUI 2458	SONOLOR 2676	TECH LINE 2863
PROLINE 2274	SANYO 2462	SONTEC 2677	TECHICA 2865
PROMAX 2275	SANYUAN 2464	SONY 2679	TECHNEMA 2866
PROSCAN 2279	SBR 2492	SOUND AND VISION 2680	TECHNICA 2868
PROSCO 2280	SCEPTRE 2498	SOUNDESIGN 2684	TECHNICS 2869
PROSONIC 2282	SCHAUB LORENZ 2500	SOUNDWAVE 2689	TECHNIKA 2870
PROTECH 2284	SCHNEIDER 2501	SOVA 2690	TECHNISAT 2873
PROTON 2288	SCIMITSU 2505	SOWA 2691	TECHNISSON 2874
PROTRON 2289	SCOTCH 2506	SOYEA 2692	TECHNOL ACE 2875
PROVIEW 2290	SCOTT 2508	SOYO 2693	TECHNOSONIC 2878
PROVISION 2291	SEARS 2514	SPECTRONIQ 2701	TECHVIEW 2883
PULSAR 2296	SEAWAY 2515	SQUAREVIEW 2703	TECHWOOD 2884
PYE 2302	SEELVER 2520	SSS 2708	TECNIMAGEN 2885
PYMI 2304	SEG 2522	STACK 9 2710	TECO 2886
QINGDAO 2308	SEI 2524	STANDARD 2713	TEDELEX 2889
QUASAR 2320	SEI-SINUDYNE 2525	STARLITE 2728	TEK 2892
QUELLE 2322	SELECO 2528	STENWAY 2739	TEKNIKA 2895
QUESTA 2324	SEMIVOX 2529	STERN 2741	TELEAVIA 2901
R-LINE 2327	SEMP 2530	STRATO 2745	TELECOR 2910
RADIALVA 2329	SENCORA 2531	STRONG 2748	TELEFUNKEN 2914
RADIOLA 2330	SENTRA 2534	STUDIO EXPERIENCE 2750	TELEFUSION 2915
RADIOMARELLI 2331	SERIE DORADA 2538	STYLANDIA 2752	TELEGAZI 2917
RADIONETTE 2332	SERINO 2539	SUNBRITE 2759	TELEMEISTER 2924
RADIOSHACK 2333	SHANGHAI 2547	SUNKAI 2762	TELESONIC 2930
RADIOTONE 2334	SHAOFENG 2549	SUNNY 2764	TELESTAR 2931
RANK 2345	SHARP 2550	SUNSTAR 2768	TELETECH 2934
RANK ARENA 2346	SHENCAI 2553	SUNWOOD 2772	TELETON 2935
RBM 2350	SHENG CHIA 2554	SUPERLA 2782	TELEVIDEON 2938
RCA 2351	SHENYANG 2555	SUPERSCAN 2786	TELEVIEW 2939
REALISTIC 2354	SHERWOOD 2557	SUPERSONIC 2787	TELEVISIO 2941
RECCO 2358	SHINTOSHI 2564	SUPERTECH 2789	TEMCO 2946
RECOR 2359	SHIVAKI 2567	SUPERVISION 2791	TENNESSEE 2952
RECTILIGNE 2362	SHOGUN 2568	SUPRA 2792	TENSAI 2954
REDIFFUSION 2364	SHORAI 2569	SUPRE-MACY 2794	TENSON 2955
REDSTAR 2366	SIAM 2572	SUPREME 2795	TEVION 2962

TEXET 2963	VOODOO 3215	AYOMI 3525	OULIN 4123
THOMAS 2971	VORTEC 3217	BLACKTRON 3526	PRANDONI PRINCE 4125
THOMSON 2972	VOXSON 3220	DUAL-TEC 3528	PROFEKT 4126
THORN 2974	VUE 3225	ELBE-SHARP 3529	RADIO 4128
TMK 2994	WALTHAM 3230	ELECTA 3530	SHANSHUI 4133
TML 2995	WARDS 3231	ELECTRO TECH 3531	SONGDIAN 4136
TNCI 2996	WATSON 3233	HILINE 3533	SRYPION 4138
TOBO 2999	WATT RADIO 3234	INTERACTIVE 3534	TEACHIMAGEN 4140
TOKAI 3001	WAYCON 3237	KAMOSONIC 3535	TIANKEBAN 4142
TOKAIDO 3002	WEGA 3238	LG/GOLDSTAR 3536	TRANSFEC 4143
TOKYO 3004	WEGAVOX 3239	LIESENK 3537	DATRON 4201
TOMASHI 3006	WELLTECH 3244	LIFE 3538	SHENGCAI 4217
TOPLINE 3016	WELTBlick 3245	LOEWE OPTA 3540	MINISTRY OF SOUND 4247
TOSHIBA 3021	WELTSTAR 3247	NORDVISION 3543	INSPIRA 4296
TOTEVISION 3024	WESTINGHOUSE 3249	ONCEAS 3544	O.K.LINE 4301
TOUCH 3025	WESTON 3251	QUANDRA VISION 3546	ONEI 4302
TOWADA 3028	WHARFEDALE 3255	RADIO SHACK 3547	POLYVISION 4304
TOYODA 3030	WHITE WESTINGHOUSE 3258	RTF 3548	WALKER 4311
TRAKTON 3036	WILSON 3260	TESMET 3550	MOREE 4565
TRANS CONTINENS 3037	WINDSOR 3265	AOMNI 3555	NIKAI 4566
TRANS-CONTINENTS 3039	WINDSTAR 3266	CHIMEI 3563	NOVEX 4567
TRANSONIC 3041	WINDY SAM 3267	DIGITAL LIFESTYLES 3567	
TRANSTEC 3042	WINTEL 3271	YU-MA-TU 3603	
TRIAD 3049	WYSE 3288	BORK 3615	
TRIDENT 3054	XENIUS 3297	IDEAL 3641	
TRISTAR 3057	XIAHUA 3299	JTV 3645	
TRIUMPH 3058	XIANGYU 3302	MELECTRONIC 3654	
TVS 3081	XINGFU 3305	ONN 3663	
TVTEXT 95 3082	XINGHAI 3306	TESLA 3680	
UHER 3089	XINRISONG 3308	KENSTAR 3756	
ULTRA 3093	XLOGIC 3310	VISTRON 3773	
ULTRAVOX 3095	XORO 3315	PENSONIC 3778	
UNIC LINE 3100	XRYPTON 3317	UNION 3781	
UNITED 3106	XUELIAN 3320	DIGIMAX 3808	
UNIVERSAL 3113	YAMAHA 3326	GFM 3820	
UNIVERSUM 3115	YAMISHI 3328	MITSAI 3851	
UNIVOX 3116	YOKAN 3335	NORTEK 3862	
US LOGIC 3124	YOKO 3336	CAMPER 3911	
VECTOR RESEARCH 3137	YORX 3340	NEXUS ELECTRONICS 3948	
VENTURER 3143	YUHANG 3345	PARK 3951	
VEOS 3144	ZANUSSI 3349	BARON 3959	
VESTEL 3148	ZENITH 3356	MORGANS 3970	
VEXA 3149	ZHUHAI 3364	ZIGGO 4007	
VIBRANT 3154	ZONDA 3369	CAMERON 4032	
VICTOR 3155	ZT GROUP 3370	GABA 4059	
VIDEOCON 3163	ARENA 3375	NIMBRO 4065	
VIDEOLOGIC 3165	G-HANZ 3397	QUADRO 4071	
VIDEOLOGIQUE 3166	I-INC 3462	SHINELCO 4074	
VIDEOSAT 3170	TRUTECH 3467	VU 4078	
VIDEOSYSTEM 3172	AFTRON 3470	CATHA 4094	
VIDEOTECHNIC 3173	DYNEX 3476	CHUANGJIA 4096	
VIDEOTON 3174	ELEMENT 3477	DUONGJIE 4101	
VIDIKRON 3178	HANNS.G 3478	FAGOR LIFE 4102	
VIDTECH 3179	REVOLUTIONHD 3503	FENMENTI 4103	
VIEWSONIC 3186	BGH 3507	GREAT WALL 4105	
VIKING 3188	GVA 3510	HUIJIABAN 4108	
VIORE 3192	PRINCESS 3514	IR 4110	
VISIOLA 3197	ACME 3521	KANGWEI 4115	
VISION 3198	AGAZI 3522	LAYCO 4117	
VISTAR 3207	ALKOS 3523	MULTISYSTEM 4121	
VIZIO 3211	ARCAM DELTA 3524	OKANA 4122	