


Motorola DTA100 Remote—Standard Video Service Only

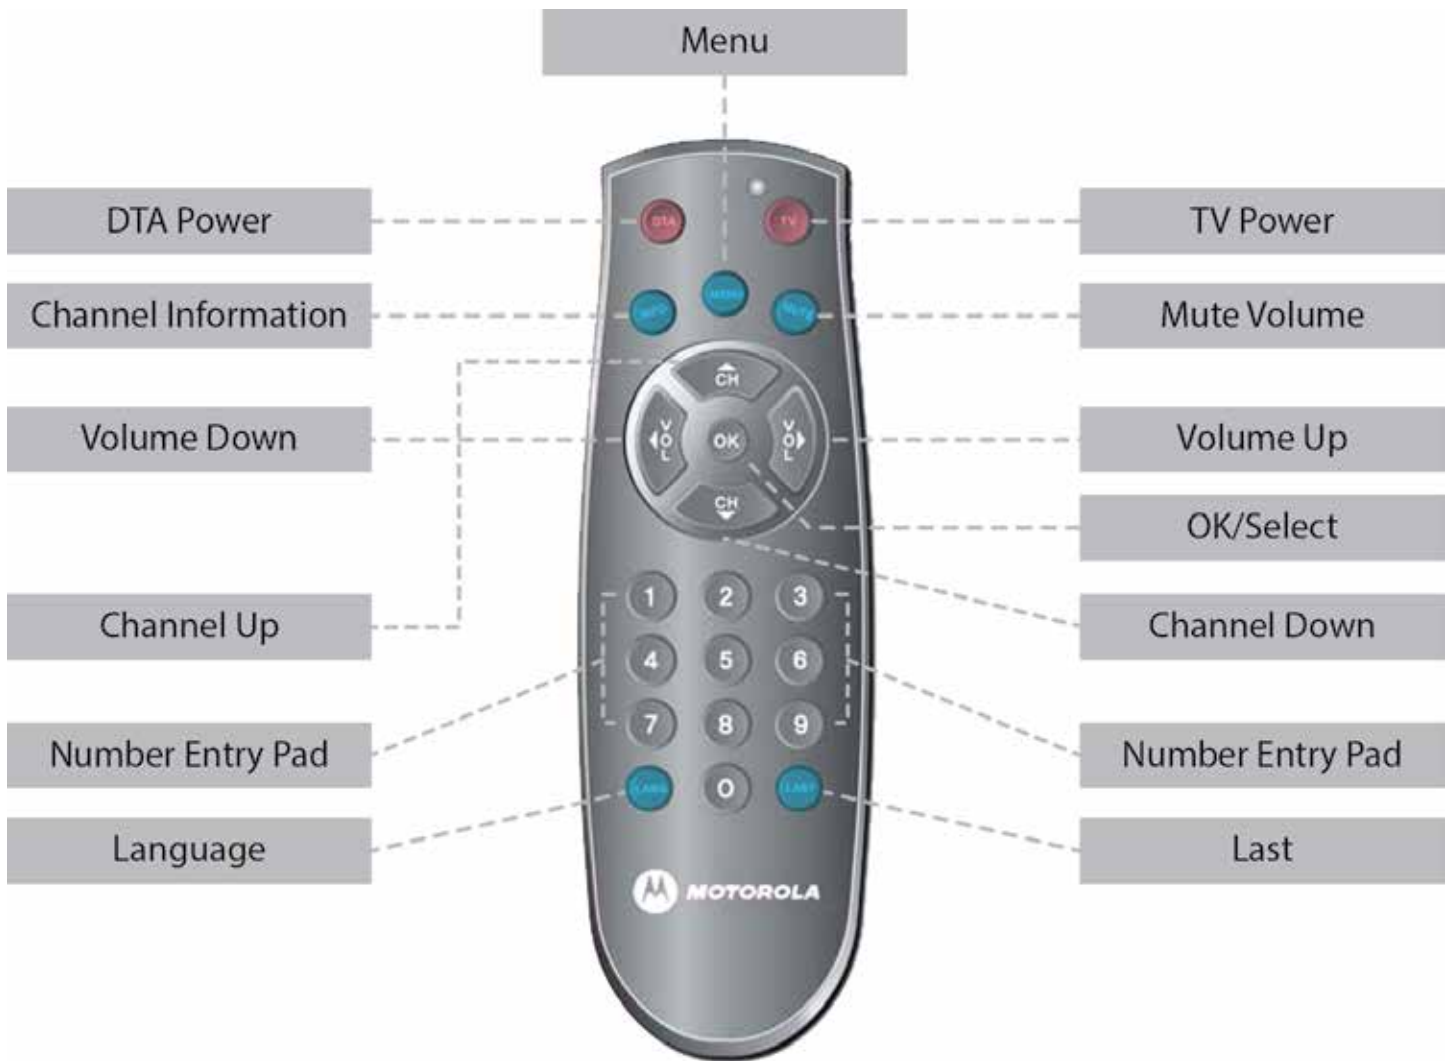






Your remote control is simple to program, easy-to-use, and can operate two (2) electronic devices, which include:

- DTA100 - Motorola Digital Transport Adapter
- TV - Television

- Before you can use your remote control, it must be programmed (set-up) to operate your TV.

Point and Press® Programming

1. Turn on the TV by pressing the **POWER**  button on your television set.
2. On your remote, press **OK** and then **MUTE**  button together until the LED illuminates.
3. Press and hold the **CH ▲** button until one device turns off. While you are pressing the **CH ▲** button, the LED will blink. As soon as one device turns off, release the **CH ▲** button.
4. Press **MUTE**  on your remote control:
 - a. If the TV turns back on, press **OK** on the remote to lock in this code. The LED will blink and go out.
 - b. If the TV does not turn back on, press **CH ▼** one step at a time until that device turns back on. Each time you press the **CH ▼** button, the LED will blink. Once you have found a code that turns the device on/off, press **OK** to lock in this code. The LED will blink and go out.

- If the Point and Press® Programming method does not work, please refer to the Programming And Operating Instructions code book provided in the installation kit you have received. Follow step 4: Programming Your TV-Code-Entry Programming.

Enter your code here for easy reference

If the **Programming And Operating Instructions** code book was not provided in your installation kit or you no longer have it, please visit www.hbc.com/support to download the Standard Customer Handbook online. If your TV screen is blank or you have no sound, you may have not completed all of the installation and activation steps. Please ensure each step of the installation and activation has been completed. If problem(s) still persist, please contact HBC at (507) 474-7000.

Important Handling and Installation Instructions:

- Install the DTA100 away from heat sources such as radiators, heat registers, and stoves.
- Do not operate the DTA100 in extreme weather conditions.
- Do not place the DTA100 in an enclosed area where the cooling vents are blocked or impede the flow of air through the ventilation openings.
- Position the DTA100 with at least 3 inches of space on all sides.
- Place the DTA100 on a flat surface that is not prone to vibration or impact.
- Do not install the DTA100 in an area where condensation occurs.

MOTOROLA DTA100 REMOTE

TV

ACER 454 728
 ADMIRAL 026 027 028 029 054 211 213 408
 ADVENT 047 072 094 425 447 463
 ADVENTURA 047
 AIKO 015 051 391
 AIWA 214 471
 AKAI 020 053 462 473 522 524 547 572 586
 ALLERON 211 395
 AMARK 023 215
 AMSTRAD 157
 AMTRON 168 400
 ANAM 044 168 217 218 219 220 221 222 223 400 403
 AOC 053 073 108 384 573 587
 APEX 030 038 427
 ASTAR 462
 AUDIOVOX 168 191 220 400 465 659
 BELCOR 073
 BELL AND HOWELL 211 213 355 388 736
 BEN Q 454 820
 BRADFORD 168 400
 BRILLIAN 792
 BROKSONIC 165 167 423 434 809
 BROKWOOD 073
 CANDLE 068 073 091 108 385 573 587
 CARVER 072 405 729
 CELEBRITY 020
 CENTURION 095 107 108
 CITIZEN 015 023 051 068 073 091 108 168 211 213 233 355 385 388 391 400 573 587 741
 COBY 558
 COLORTYME 730
 CONCERTO 073 095 108 573 587
 CONTEC/CONY 039 147 168 233 400 732
 CORONADO 023
 CRAIG 168 223 400
 CROSLEY 072 405 598 729
 CROWN 023
 CURTIS MATHES 016 023 054 072 073 107 108 211 213 355 288 405 573 587 606 729 736 741 759 777
 CXC 168 400
 DAEWOO 051 068 073 095 158 159 189 191 194 196 197 198 200 202 204 205 206 207 209 737 741 793
 DAYTEK 583 833 834
 DAYTRON 023 073 095 107 108 573 587 741
 DIMENSIA 759
 DELL 072 094 448
 DIAMOND VISION 563
 DUMONT 049 073 108 573 587

DURABRAND 157
 DYNEX 167 415 424 567 577
 ELECTRO HOME 020 044 073 095 108 403 573 587 739
 ELECTROBAND 020
 ELEKTRA 353
 ELEMENT 459 587
 EMERSON 016 021 023 053 064 073 100 103 108 139 158 159 164 165 166 167 168 169 189 191 211 233 355 387 392 395 400 401 402 403 408 415 424 507 567 573 577 587 590 731 734 736 741 743 744 745 746 748 750 751 754 757 760 761 764 786
 ENVISION 073 095 108 573 587
 ESA 454 456 538
 FISHER 104 355 356 288 736
 FUJITSU 211 395 460 469 560 776 813
 FUNAI 047 048 157 168 211 395 400
 FUTURETECH 168 400
 GATEWAY 426 533
 GE 015 018 042 044 045 049 054 055 068 069 070 073 090 092 095 101 102 103 108 211 213 389 390 396 397 403 406 407 573 587 739 742 755 759 806
 GIBRALTAR 023 048 049 053 068 073 090 095 107 108 233 360 361 573 587
 GO VIDEO 443 562
 GOLDSTAR (LG) 023 053 068 073 090 107 108 233 360 361 424 567 577 587
 GRADIENTE 104
 GRUNDIG 233
 GRUNPY 023 047 073 095 108 233 360 361 384 573 587
 HAIER 053 073 095 108 427 519 573 587 596
 HALL MARK 073 095 108 573 587
 HARVARD 168 400
 HITACHI 023 039 068 073 095 096 097 098 099 100 108 233 393 573 587 732 750 753 756 787 796 801 803 808 814 815 817 819 821
 HP 072
 HYUNDAI 453
 ILO 524 586
 IMA 168 400
 INFINITY 072 405 729
 INITIAL 470
 INKEL 364
 INSIGNIA 167 415 424 450 456 461 462 523 524 567 577 586
 JBL 072 405 729
 JC PENNEY 023 038 039 045 053 068 073 091 092 095 102 108 355 361 384 385 389 390 573 587 739 741 742 755 759 767 795

JCH 020
 JENSEN 062 073 108 461 573 587
 JVC 039 045 104 105 106 233 396 397 410 589 728 732 742 753 763 766
 KAWASHO 020 073 095 108 573 587
 KENWOOD 073 095 108 573 587
 KLOSS NOVABEAM 071 168 400 404
 KMC 023
 KONKA 445 589
 KOSCH 462
 KTV 023 053 064 168 233 366 400 741 770
 KURAZAI 211 213
 LEGEND 169
 LG (GOLDSTAR) 023 053 068 073 090 107 108 233 360 361 384 424 567 577 587
 LODGENET 211 213
 LOGIK 211 213
 LUXMAN 068 073 095 108 573 587
 LXI 024 026 027 028 029 038 072 157 355 388 405 729 736 755 759 773
 MAG 459
 MAGNAVOX (PHILIPS) 023 044 068 071 072 073 089 090 091 092 093 094 095 108 134 233 385 387 390 397 398 403 404 405 419 423 426 456 463 470 472 523 533 549 594 595 685 729 740 783 810
 MAJESTIC 211 213
 MARANTZ 053 072 073 097 098 107 1008 109 405 573 587 729 778
 MATSUI 582 583 585
 MAXENT 426 533 534
 MCINTOSH 555
 MEGATRON 215
 MEMOREX 090 109 211 213 355 384 388 405 423 459 736
 MGA 053 068 073 090 095 104 107 108 109 110 216 384 394 395 398 399 417 573 587 739 790
 MITSUBISHI 053 068 073 090 095 104 107 108 109 110 216 384 394 395 398 399 417 573 587 739 739 790
 MIDLAND 023 045 049 396 049 741 742 755
 MINTEK 470
 MONTGOMERY WARD 022 023 026 027 028 029 053 071 072 108 211 213
 MOTOROLA 026 027 028 029 044 403
 MTC 073 108 384 573 587
 MULTITECH 168 400
 MULTIVISION 738
 NAD 023 773 787
 NEC 028 029 044 068 073 090 108 200 384 403 464 573 587 730
 NET TV 426 822

NIKKO 015 051 391
 NORCENT 455 472
 NUVISION 831 832
 NTC 015 051 391
 OLEVIA 073 108 519 541 587
 ONWA 168 400
 OPTIMUS 787
 OPTONICA 022 026 027 028 029
 ORION 019 159 160 161 162 163 382 423 424 558
 PANASONIC 042 043 044 045 046 403 419 423 429 631 742 771 829
 PHILCO 023 044 053 068 071 072 073 091 093 095 108 233 384 385 403 404 405 463 573 587 729
 MAGNAVOX (PHILIPS) 023 044 068 071 072073 089 090 091 092 093 094 095 108 134 233 385 387 390 397 398 403 404 405 419 423 426 456 463 470 472 523 533 549 594 595 685 729 740 783 810
 PILOT 023 073 094 108 233 573 587 741
 PIONEER 019 073 100 108 111 144 383 551 573 587 747 750 780 785 787 789 826
 PLANAR 474
 PLASMASYNC 778
 POLAROID 384 394 459 465 805 811
 PORTLAND 015 023 051 068 073 108 384 391 573 587 741
 PRIMA 072
 PRISM 045 742
 PROSCAN 055 070 578 726 755 759
 PROTON 073 090 108 233 371 372 467 573 587 749
 PROTRON 457 467
 PROVIEW 459
 PULSAR 049 073 108 573 587
 QUASAR 043 044 045 046 403 742 752 770 771
 RADIO SHACK 022 023 046 069 073 108 168 233 355 388 400 573 587 736 741 759
 RCA 042 044 052 053 054 055 068 069 070 073 095 100 108 191 984 403 408 416 573 587 725 750 755 758 759 762 765 768 769 791
 REALISTIC 022 023 046 069 166 168 233 355 388 400736 741 759
 RUNCO 049 525 049
 SAMPO 023 073 090 108 426 533 573 587 741 818
 SAMSUNG 015 016 017 023 031 073 090 095 107 108 134 147 151 153 233 384 386 411 426 508 533 573 577 587 741 767 772 788 794 800 802
 SANSUI 169 392 415 423 424 812
 SANYO 073 104 108 353 355 356 376 377 388 573 587 735 736 775



SCEPTRE 468
SCOTT 073 00 108 168 211 233 395
400 561 573 587 743
SEARS 023 029 030 031 038 039 068
072 095 104 157 211 213 353 355
356 388 395 405 573 729 732 736
755 759 763 773 792
SHARP 016 022 023 024 025 026 027
028 029 073 108 233 393 395 409
573 587 741 745 751 779 797
SHOGUN 073 108 573 587
SIGNATURE 2000 023 026 027 028
029 108 211 213
SIMPSON 091 385
SONY 014 020 021 050 095 178 540
774 804 824 827 828 830
SOUNDESIGN 073 091 108 168 211
385 395 400 573 587
SOYO 562
SQUAREVIEW 157
SSS 073 108 168 400 573
STARLITE 168 400
SUNBRITE TV 587
SUPERSCAN 419 423
SUPRE-MACY 380
SUPREME 020
SVA 592
SYLVANIA 047 068 071 072 073 090
091 092 093 095 107 108 132 157
158 385 404 405 419 423 456 466
507 573 587 590 595 729
SYMPHONIC 047 132 157 168 400
761
TANDY 026 027 028 029
TATUNG 044 403 446
TECHNICS 045 742
TECHWOOD 045 068 073 573 742
TEKNIKA 023 068 072 091 108 168
213 463 587 729 732 741
TELERENT 023 213
TERA 381
TEVION 065 414
THOMSON 798
TMK 068 073 090 108 573 587
TOSHIBA 022 030031 038 039 092
355 388 423 571 736 755 773 778
781 799 807
TOTEVISION 233 741
TRUTECH 095
UNIVERSAL 068 102 389 390
VICTOR 106 763
VIDIKRON 072 105 729
VIDTECH 068 073 108 384 573 587
VIEWSONIC 426 428 455 458 472
513 515 527 528 529 530 531 532
533 534 535 536 537 538 539 816
VIORE 031 208 599 601 602
VISCO 589
VISION QUEST 459 729
VIZIO 053 062 073 095 454 538 561
573

WARDS 022 068 071 072 073 090
091 093 095 102 108 211 213 384
385 389 390 395 404 405 573 587
729 743 759 761 784
WESTINGHOUSE 020 458 463
WHITE WESTINGHOUSE 191 211
408 449
XR-1000 213
YAMAHA 068 073 108 384 573 587
YORK 090 108
ZENITH 047 048 049 050 051 073
095 108 191 213 391 405 406 408
434 567 573 577 587