






### Motorola HD-uDTA Remote—Standard Video Service Only

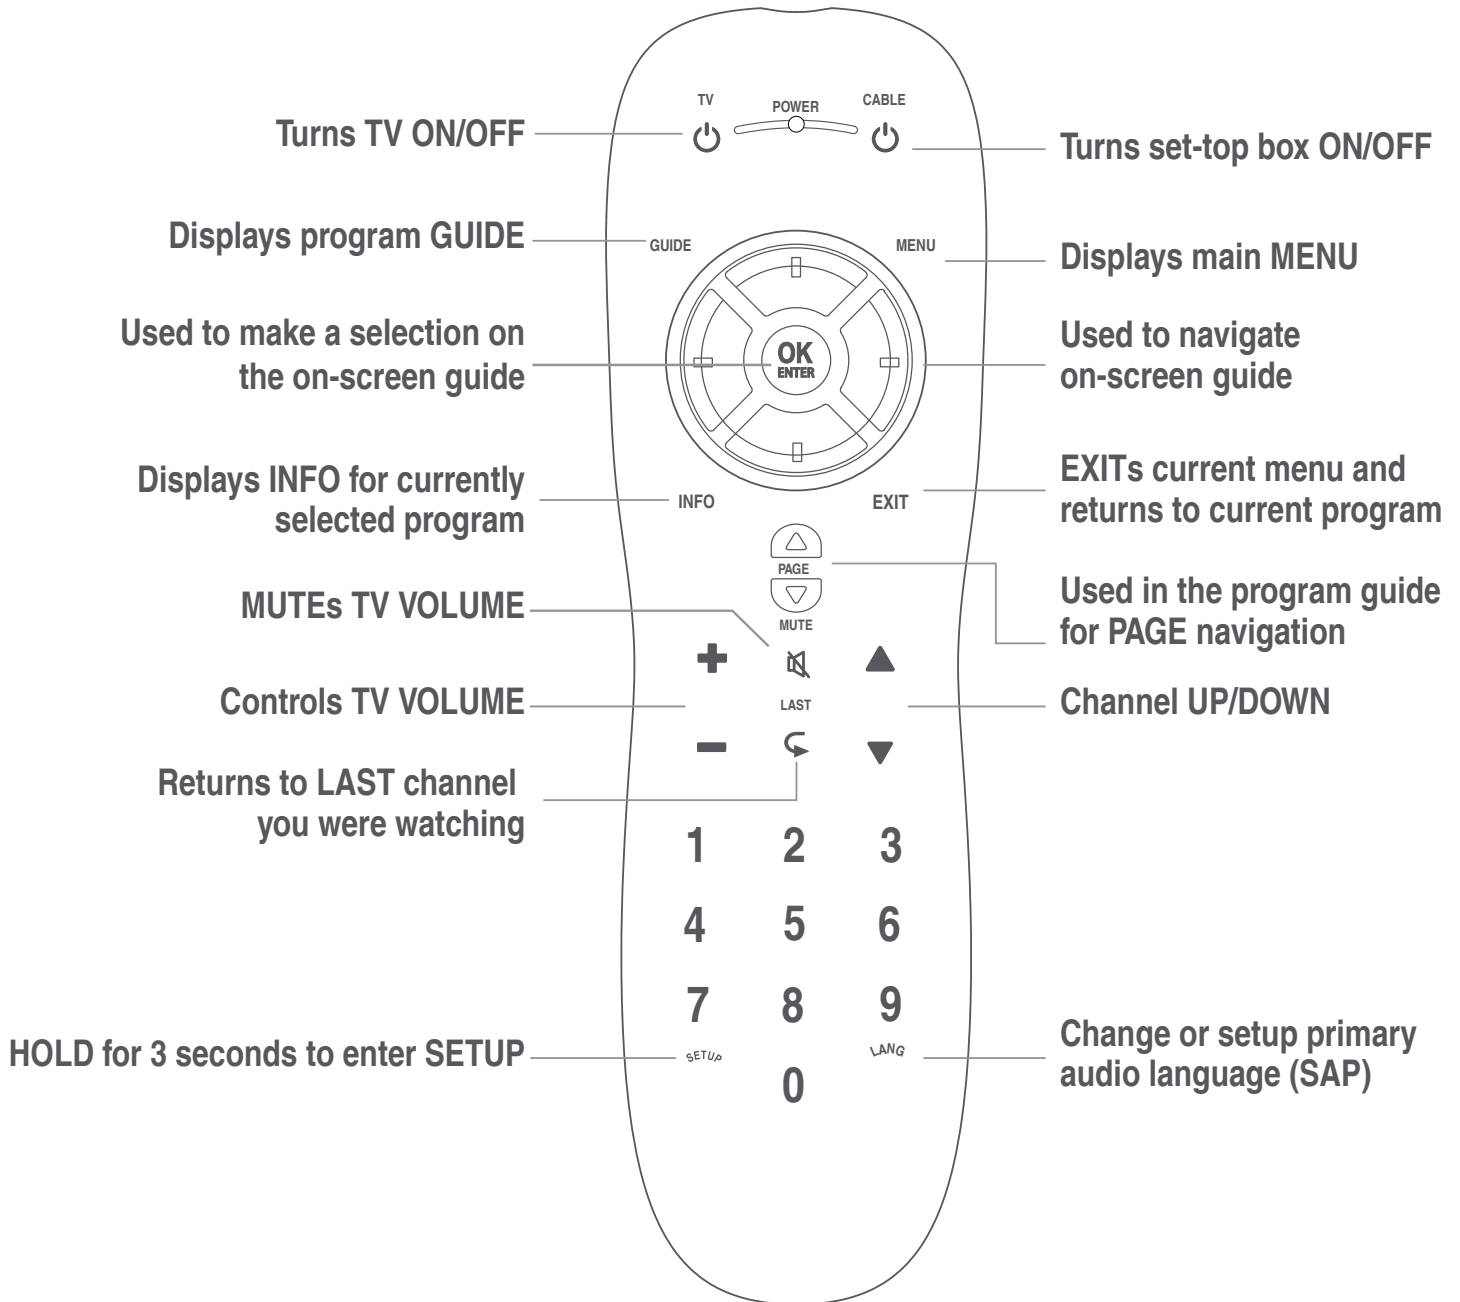

Your remote control is simple to program, easy-to-use, and can operate two (2) electronic devices, which include:

- HD-uDTA - Motorola HD (High-Definition) Universal Digital Transport Adapter
- TV - Television

1. Turn on the TV by pressing the **POWER**  button on your television set.
2. On your remote, press **SETUP** until LED blinks twice.
3. Pressing the **TV POWER** , the LED should remain on.
4. Press the numbered button listed for your TV brand (example: press the **6** button for all Samsung TVs).
  - **1** = Insignia/Dynex
  - **2** = LG/Zenith
  - **3** = Mitsubishi
  - **4** = Panasonic
  - **5** = Philips/Magnavox
  - **6** = Samsung
  - **7** = Sharp
  - **8** = Sony
  - **9** = Toshiba
  - **0** = Vizio
5. Let go of the numbered key when your TV turns off and setup is complete.

*- Before you can use your remote control, it must be programmed (setup) to operate your TV. Two (2) blinks from the LED light means setup was a success, one (1) long blink means setup was not successful. If your TV screen is blank or you have no sound, you may have not completed all of the installation and activation steps. Please ensure each step of the installation and activation has been completed. If problem(s) still persist, please contact Wizards Technical Support at (877) 457-9669.*



ACCURIAN 1803  
ACTION 0873  
AKAI 1207, 1675, 1676,1688, 1689,  
1692,1935, 2232  
AMERICA ACTION 0180  
ANAM 0180  
AOC 1365, 1590, 2014, 2087, 2402,  
2621  
AOMNI 1623  
APEX DIGITAL 0890, 1217, 2397  
ASTAR 1531, 1738  
AUDIOVOX 0180, 0802, 0846,  
0875, 1564, 1803,1951, 2121, 3065  
AVENTURA 0171  
BENQ 1032, 1315  
BRADFORD 0180  
BROKSONIC 1935  
CANDLE 0186  
CARVER 0170  
CASIO 1205  
CITIZEN 0186, 1935  
CLARION 0180  
COBY 1538, 1634, 2017, 2306, 2314,  
2315, 2326, 2338, 2340, 2344, 2345,  
2348,3202  
COMMERCIAL SOLUTIONS 1447  
CONTEC 0180  
CRAIG 0180  
CROWN 0180  
CURTIS 2352, 2397, 2855,2859  
CURTIS MATHES 1661  
CXC 0180  
DAEWOO 0661, 1661  
DELL 1080  
DENSTAR 0628  
DIGITAL LIFESTYLES 1765  
DISNEY 1665, 1892  
DURABRAND 0171, 0178, 0180,1665  
DYNEX 1463, 1785, 2049  
ELECTROGRAPH 1623, 1755  
ELECTROHOME 1670  
ELEMENT 1687, 2183  
EMERSON 0171, 0178, 0180, 1394,  
1661, 1665,1864, 1963  
EMPRES 1422, 1765  
ENCROSS 0876  
ENVISION 0813, 1365, 2014,2087  
ESA 0171, 1963  
FUJITSU 0186, 0683, 0809  
FUNAI 0171, 0180, 1963  
FUTURETECH 0180  
GATEWAY 1755, 1756  
GE 0178, 1447  
GFM 0171, 1665, 1864,1963  
GO VIDEO 0886  
GOLDSTAR 0178  
GPX 2693  
GRUNDIG 0683  
GRUNPY 0180  
HAIER 1753, 2293, 2494, 2690, 3204  
HALLMARK 0178  
HANN.S G 1783  
HANNSPREE 1348, 1745, 1783  
HARVARD 0180  
HELIOS 0865  
HEWLETT PACKARD 1088  
HISENSE 1314, 1660, 2098  
HITACHI 0797, 1643  
HP 1088  
HYUNDAI 0849, 1219, 1294  
I-INC 1746  
ILO 1286, 1394, 1463, 1603,1665,  
1684, 1990  
INITIAL 1603, 1990  
INSIGNIA 0171, 1204, 1423, 1517,  
1564, 1660, 1710, 1785, 1892, 1963,  
2049, 2417  
IX 0877  
JCM 2256  
JENSEN 1299  
JVC 1601  
KDS 1498, 1687  
KEC 0180  
KONKA 0628  
KOST 1483  
KREISEN 0876  
KTV 0180  
LASONIC 3198  
LG 0178, 0856, 1423, 1447, 1530  
LITEON 1088  
LODGINGSTAR 3147  
LXI 0156, 0178  
MAG 1498, 1687  
MAGNAVOX 0171, 0186, 0706, 0802,  
1198, 1365, 1454, 1755, 1867,  
1963, 1990  
MARANTZ 0704, 1398, 1454  
MAXENT 1211, 1755, 1757  
MEGATRON 0178  
MEMOREX 0150, 0178, 0877, 1665,  
1670, 1785, 1892, 2739  
MGA 0150, 0178  
MINTEK 1603, 1990  
MITSUBISHI 0150, 0178, 1250, 1797  
MULTITECH 0180  
NAD 0156, 0178  
NAXA 2104, 3154  
NEC 0170, 0704, 0876, 1398, 1797,  
2026  
NETTV 1755  
NEXUS ELECTRONICS 2183  
NIKKO 0178  
NORCENT 0824, 1365, 1590, 1591,  
1745  
NORWOOD MICRO 1286, 1303  
OLEVIA 1144, 1610  
ONWA 0180  
OPTOMA 1348  
ORION 1463  
PANASONIC 1480  
PARK 2104  
PENNEY 0156, 0178  
PHILCO 0171, 1394, 1665, 1963  
PHILIPS 0171, 1394, 1454, 1483,  
1867  
PIONEER 1398, 1457  
PLANAR 1496  
POLAROID 0865, 1286, 1314, 1328,  
1498, 1538, 1687, 2063,2121  
PORTLAND 1661  
PRIMA 1753, 1785  
PROSCAN 1447, 2147, 2183, 2256  
PROTON 0178  
PROTRON 1320  
PROVIEW 1498, 1687  
RADIOSHACK 0178, 0180  
RCA 1447, 1661, 1781, 2434, 2746,  
2932, 3147  
REALISTIC 0178, 0180  
REVOLUTIONHD 1623  
RUNCO 1398  
SAMPO 1755  
SAMSUNG 0178, 0766, 0814, 1060,  
2051  
SANSUI 0171, 1409, 1463, 1670,  
1892, 1935  
SANYO 1142  
SCEPTRE 0878, 1217, 1360, 1599,  
2337  
SCOTCH 0178  
SCOTT 0178, 0180, 1711  
SEARS 0156, 0171, 0178  
SHARP 0818, 2402  
SHERWOOD 1399  
SIMPSON 0186  
SKYWORTH 1799  
SOLE 1377, 1483, 1530, 1623  
SONY 0810, 1685  
SOUNDESIGN 0178, 0180, 0186  
SOVA 1320  
SOYO 1520, 1746, 1826, 1828  
SPECTRONIQ 1498, 1687  
SQUAREVIEW 0171  
SSS 0180  
STARLITE 0180  
SUNBRITETV 1435, 1610, 2337  
SUPERSCAN 0864  
SUPERSONIC 1753, 2104, 3154,  
3204  
SVA 0865, 1963  
SYLVANIA 0171, 1314, 1394, 1665,  
1864, 1963  
SYMPHONIC 0171, 0180, 1394  
SYNTAX 1144, 1610  
TATUNG 1286, 1756, 2496  
TCL 2434  
TEKNIKA 0150, 0180, 0186  
TMK 0178  
TOSHIBA 0156, 1343, 1369, 1524,  
1743, 1935  
TRUTECH 1665, 1723  
US LOGIC 1286, 1303  
VIDIKRON 1398  
VIDTECH 0178  
VIEWSONIC 0797, 0864, 0885, 1330,  
1365, 1564, 1578, 1627, 1742, 1755,  
2014, 2049, 2087, 2277  
VIORE 1207, 1684, 2104, 2352, 3094,  
3118  
VISART 1336  
VITO 1320  
VIZIO 0864, 0885, 1756, 1758, 2707  
WARDS 0156, 0178, 0180, 0186  
WAYCON 0156  
WESTINGHOUSE 0885, 0890, 1217,  
1282, 2195, 2293, 2499  
WHITE WESTINGHOUSE 1661  
WYSE 1365  
YAMAHA 0797  
ZENITH 0178, 1365, 1423, 1661