


## Titan Remote–Luminet<sup>SM</sup> Video Service Only

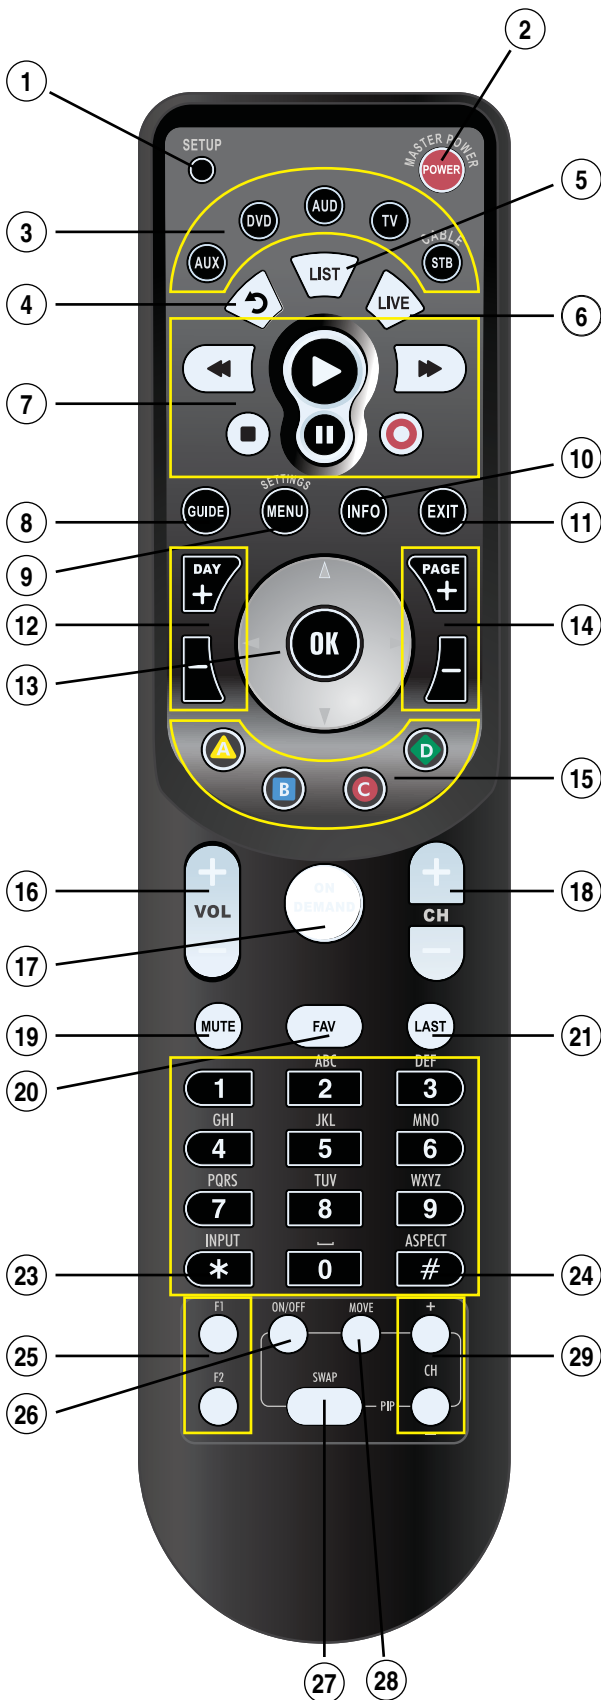

- 1. SETUP** - Use **SETUP** for all programming sequences.
- 2. MASTER POWER** - Press **POWER** once to turn on or off a home theater device.
- 3. AUX, DVD, AUD, TV, STB** - Press **AUX**, **DVD**, **AUD**, **TV**, or **STB** once to select a home entertainment device to control. Each key has a red LED that blinks each time a key is pressed to indicate the current operating mode.
- 4. SKIP BACK** - Press **SKIP BACK** to instantly replay the last 7 seconds of the program you are watching.
- 5. LIST** - Press **LIST** once to display a list of recorded programming on your DVR.
- 6. LIVE** - Press **LIVE** to return to watching live TV.
- 7. CONTROL PLAYBACK** - Use these keys to control playback of video or audio files relating to DVR, DVD, VCR, or CD devices.
- 8. GUIDE** - Use **GUIDE** to display the program guide available from your service provider.
- 9. MENU** - Use **MENU** to display the options menu of the home theater device you are controlling.
- 10. INFO** - Use **INFO** to display the current channel and program information.
- 11. EXIT** - Use **EXIT** to directly exit menus, guides, and applications.
- 12. DAY** - Use **DAY+** (or **DAY-**) to move a day forward (or back) on your program guide.
- 13. OK** - Use the Cursor keys to move the cursor in the program guide and menu screens and to navigate within the interactive service. Use **OK** to choose options, PPV events, and to tune to programs from the program guide.
- 14. PAGE** - Use **PAGE+** (or **PAGE-**) to page up (or page down) through menu screens and the program guide.
- 15. A, B, C, D** - Use **A**, **B**, **C**, or **D** as shortcuts to access additional features available on set-top box menu screens, program guide, and interactive applications.
- 16. VOLUME** - Use **VOL+** (or **VOL-**) to raise (or lower) the audio volume.
- 17. ON DEMAND** - Press **ON DEMAND** for direct access to On-Demand programming and other interactive services.
- 18. CH** - Use **CH+** (or **CH-**) to select the next higher (or lower) channel. For DVD players, use these keys to skip forward (or reverse) through chapters. For amplifiers/receivers, use these keys to select the next higher (or lower) preset station.
- 19. MUTE** - Press **MUTE** once to turn sound off; press again to turn sound back on.
- 20. FAV** - Use **FAV** to cycle through your favorite channels stored on your service provider's set-top box.
- 21. LAST** - Use **LAST** to return to previous channel.
- 22. NUMBER KEYPAD** - Use the keypad numbers (**1-9**, and **0**) to directly tune channels (e.g., 09). For amplifiers/receivers, use the keypad numbers to select inputs 1 through 10.
- 23. INPUT** - In CBL mode, press **INPUT** to view other video sources (A or B) instead of cable. In all other modes, use **INPUT** to select an input source for that device.
- 24. ASPECT** - Press **ASPECT** once to change the aspect ratio (4:3 or 16:9) on your STB or TV.
- 25. F1, F2** - These are macro keys that can be customized by you or your service provider.
- 26. ON/OFF** - Use **PIP ON/OFF** to open or close PIP window.
- 27. SWAP** - Use **SWAP** to swap the primary viewing channel with the PIP channel. For a DVR/PVR, **SWAP** can be used to switch the active channel tuner.
- 28. MOVE** - Use **MOVE** to move the PIP window location.
- 29. CH** - Press **PIP+/PIP-** to change the PIP channel.



The Titan universal remote control comes pre-programmed to operate the set-top box that is supplied by your service provider. In addition, Titan can be programmed to control four (4) additional home theater equipment devices.

**There are two ways you can Program your Remote:**

- Program your remote using the Brand Search Method.
- Program your remote using the Auto Search Method.

**Brand Search Method**

1. Turn on all of the devices that you wish to control.
2. On the remote control, press the mode key that you wish to program once (**AUX**, **DVD**, **AUD**, or **TV** , ); it blinks once.
3. Press and hold **SETUP** until the mode LED blinks twice.
4. Use the 5-digit manufacturer codes supplied following these instructions to locate device type and brand name for the device you wish to control. Enter the first 5-digit code for your device. If performed correctly, the mode LED blinks twice.  
*- If the selected mode LED emits a long blink, the entry is invalid. Repeat steps 2 through 4 and try entering the same code again.*
5. Aim the remote control at the device and press **POWER** once. The device should turn off. If it does not, repeat steps 2 through 3, trying each code for your brand until you find one that works. If it still does not respond, try the "Auto Search Method."  
*- If the device does not have a **POWER** key, press the Play key. Repeat steps 2 through 5 for another mode and/or key or press and hold **SETUP** to exit programming.*

TV Setup code Number	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	Device type: _____
AUD Setup code Number	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	Device type: _____
DVD Setup code Number	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	Device type: _____
AUX Setup code Number	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	Device type: _____

**Auto Search Method**

If your home entertainment device does not respond to the Titan Remote Control after trying all of the codes listed for your brand, or if your brand is not listed at all, try searching for your code.

**For Example, to Search for a code for your TV:**

1. Turn on your TV.
2. On the remote control, press **TV** once; it blinks once. Then press and hold **SETUP** until the TV key blinks twice.
3. Enter **9 9 1**. The **TV** key blinks twice.
4. Enter one of the following four digits:
  - a. Set-top boxes (cable, satellite, etc.) - **0**
  - b. TV - **1**
  - c. DVD/VCR/DVR - **2**
  - d. Audio Devices - **3**
5. Aim the remote control at the TV and press **POWER** once.
6. Press and release the **CH+** key continuously, then stop when the TV turns off.  
*- In the search mode, the remote control sends IR codes from its library to the selected device, starting with the most popular code first.*
7. Press **POWER**. The TV should turn on, then press **SETUP** to lock in the code.  
*- If the TV does not turn on during step 6, then slowly press and release **CH-** to go back through the codes. Press **SETUP** when the TV turns on.*
8. To search for the codes of your other devices, repeat steps 1 through 6, but substitute the appropriate key (e.g., **AUX**, **DVD**, **AUD**, or **STB**) for the device you are searching for.



### Programming Volume lock

Volume Lock allows you to set your remote to direct all volume commands to whichever home theater device you designate as your audio source. By default, Global (All) Volume Lock is set to TV, so you can control TV volume while in any mode on your remote. You can also perform Volume Lock on a selected device or set of devices to set Volume Lock to function on some modes, but not on others.

### Locking all Volume Control to a Single Device

To change the Global Volume Lock setting from TV (default) to another device, follow these steps:

1. Press and hold **SETUP** until the mode LED blinks twice.
2. Enter **9 9 3**. The mode LED blinks twice.
3. Press **VOL+** once. The mode LED blinks once.
4. Press the mode key for the device that you wish volume functions to control. The mode LED blinks twice.

Now pressing **VOL+**, **VOL-**, or **MUTE** controls only that device's volume, regardless of operating mode.

### Locking Volume Controls for Specific Device Modes

To set Volume Lock to occur for some device modes, but not others, you must first follow the steps under "Unlocking All Volume Locks."

Then follow the steps below:

1. Press the mode key for the device that you wish volume functions to control.
2. On the remote control, press and hold **SETUP** until the last-selected device key blinks twice.
3. Enter **9 9 3**. The mode LED blinks twice.
4. Press each mode key that relates to the devices that you do not use for volume control. These will be the modes in which the volume functions control the device related to the mode key you pressed in step 1. Any mode omitted from this step will have all volume controls assigned to that mode's device.
5. Press **SETUP** to save. The mode LED blinks twice.

### Unlocking all Volume Locks

Performing these instructions sets independent volume control for all programmed devices (e.g., when in DVD mode, the **VOL** and **MUTE** keys send commands to the DVD player).

1. On the remote control, press and hold **SETUP** until the mode key LED blinks twice.
2. Enter **9 9 3**. The last-selected device key blinks twice.
3. Press **VOL-** once. The mode LED blinks four times.

Now, volume functions are controlled through whichever device mode is active on the remote control.

### Programming Channel lock

By default, the remote control's channel-control capabilities are locked to the set-top box supplied by your service provider. The affected keys\* are **1** through **0**, **CH+**, **CH-**, and **LAST**. This will guarantee that you do not inadvertently change a channel on your TV or VCR while watching broadcast programming on your set-top box. However, you can de-activate this feature to allow full access to these keys to control the device associated with the active mode.

### Locking all Channel Control to one Device

To lock all channel-control functions to a specific device, follow these steps:

1. Press and hold **SETUP** until the mode LED blinks (e.g., TV) twice.
2. Enter **9 7 3**. The mode LED (e.g., TV) blinks twice.
3. Press **CH+** once. The mode LED (e.g., TV) blinks once.
4. Press the mode key for the device that you want to use for channel-changing. The mode LED blinks twice.

Now, regardless of what mode you select, the channel keys will only change channels on the assigned device.

### Locking Channel Control for Specific Device Modes

To set Channel Lock for some device modes, but not others, you must first follow the steps under “Unlocking Channel Control.” Then follow the steps below:

1. Press the mode key that corresponds to the device you wish with to command for channel-changing functions. The mode LED (e.g., TV) blinks once.
2. Press and hold **SETUP** until the mode LED (e.g., TV) blinks twice.
3. Enter **9 7 3**. The mode LED (e.g., TV) blinks twice.
4. Press each mode key that you do not use for channel-changing functions. These are the modes in which the channel-changing functions will control the device related to the mode key you pressed in step 1. Any mode omitted from this step has all channel controls assigned to that mode's device.
5. Press **SETUP** to save. The mode LED blinks twice.

### Unlocking Channel Control

To unlock Channel Lock and thus allow the channel control functions to work with the device associated to the active operating mode, follow these steps:

1. Press and hold **SETUP** until the mode LED blinks twice.
2. Enter **9 7 3**. The mode LED blinks four times.
3. Press **CH-** once. The mode LED blinks four times.

Now the channel functions correspond to the active mode (e.g., press **CH+** in TV mode and the TV changes channel accordingly).

### Programming Macro keys

The Titan Remote Control includes two macro keys (**F1** and **F2**, located directly below the **INPUT** key at the bottom of the remote). Macros allow you to record a series of key-presses and have the whole series of functions execute each time the related Macro key is pressed. For example, you can set up a key to power on your TV and DVD player, change inputs on the TV, and go to the main menu on the DVD player all with the touch of one macro key. If you want to change the macros stored in a previously programmed macro key, you'll need to clear the key first (see “Clearing a Macro Key”).

### Programming a Macro key

1. On the remote control, press and hold **SETUP** until the mode LED blinks twice.
  2. Enter **9 9 5**. The mode LED blinks twice.
  3. Select a macro key (for example, **F1**) and press it once. The mode LED blinks once.
  4. Press the key sequence you want to program into the macro. For example, to turn on your TV and raise its volume, press **TV, POWER, VOL+, VOL+, VOL+,...**
- You can program up to 15 key presses into one macro.
5. Press and hold **SETUP** until it blinks twice. Now the macro is saved to the assigned macro key.
  6. To add another macro, repeat steps 1 through 5 for the other macro key and the new key sequence that you wish to assign to that macro key.
- Programming more than five macros on the same macro key overwrites previous settings.

### Clearing a Macro key

1. On the remote control, press and hold **SETUP** until the mode LED blinks twice.
2. Enter **9 9 5**. The mode LED blinks twice.
3. Press the macro key you want to clear once.
4. Press and hold **SETUP** until the mode LED blinks twice.

This macro key is now clear and ready for reprogramming.



## TITAN CODES

### AUDIO AMPLIFIER CODES

BOSE 30674  
CARVER 30892  
DURABRAND 31561  
GE 30078  
HARMAN/KARDON 30892  
JVC 30331  
LEFT COAST 30892  
LENOXX 31561  
MARANTZ 30892  
MCINTOSH 30251  
OPTIMUS 30395, 30823  
PHILIPS 30892  
PIONEER 30823  
POLK AUDIO 30892  
RCA 30823  
REALISTIC 30395  
SOUNDESIGN 30078  
VICTOR 30331  
WARDS 30078  
YAMAHA 30354

### AUDIO RECEIVER CODES

ADC 30531  
AIWA 31405, 30189, 30121, 31243, 31388, 31641  
ALCO 31390  
AMC 31077  
AMPHION MEDIA WORKS 31563  
AMW 31563  
ANAM 31609, 31074  
APEX DIGITAL 31257, 31430, 31774  
ARCAM 31189, 31212  
AUDIO CONTROL 31212  
AUDIOTRONIC 31189  
AUDIOVOX 31390  
B & K 30820  
BK 30702  
BOSE 30639, 31253, 31629, 31841, 31933  
CAMBRIDGE SOUNDWORKS 31370  
CAPETRONIC 30531  
CARVER 31189, 30189, 30121, 31289  
COBY 31389  
DAEWOO 31250  
DENON 31360, 30121, 31142, 31306, 32857  
FISHER 31801  
GARRARD 30463  
HARMAN/KARDON 30110, 30189, 30891, 31289, 31306, 32241  
HITACHI 31273, 31801  
INSIGNIA 31030, 31077, 31893, 32169, 32175  
INTEGRA 31298, 31320, 31805  
JBL 30110, 31306  
JVC 31058, 30074, 31374, 31495, 31871

KENWOOD 31313, 30186, 31670  
KLH 31390, 31428  
KOSS 31366  
LG 31293, 32197  
LINN 30189  
MAGNAVOX 31189, 31269, 30189, 30391, 30531, 31514  
MARANTZ 31189, 31269, 30189, 31289  
MCINTOSH 31289  
MICROMEGA 31189  
MITSUBISHI 31393  
MYRYAD 31189  
NAD 30320  
NAKAMICHI 31313  
NORCENT 31389  
NOVA 31389  
ONKYO 30842, 31298, 31320, 31531, 31805, 31905  
OPTIMUS 31023, 30186, 30531, 30670, 31074  
ORITRON 31366  
PANASONIC 31308, 31518, 30367, 31288, 31316, 31548, 31633, 31763  
PHILIPS 31189, 31269, 30189, 30391, 31266  
PIONEER 31023, 30014, 30150, 30244, 30531, 30630, 31123, 31384  
POLAROID 31508  
POLK AUDIO 30189, 31289  
PROSCAN 31254  
RCA 31023, 31609, 31254, 30531, 31074, 31123, 31390, 31511  
RIO 31869  
ROTEL 30793  
SAMSUNG 31295  
SANSUI 31189, 30189  
SANYO 31251, 31469, 31801  
SHARP 30186, 31286  
SHARPER IMAGE 31556  
SHERWOOD 30491, 30502, 31077, 31423, 31653, 31905, 32169  
SHERWOOD NEWCASTLE 32169  
SONIC BLUE 31869  
SONY 31759, 31058, 31258, 30793, 31558, 31658, 31758, 31822, 31858  
SOUNDESIGN 30670  
STEREOPHONICS 31023  
SUNFIRE 31313  
TEAC 30463, 31074, 31390, 31528  
TECHNICS 31308, 31518, 31633  
THORENS 31189  
TOSHIBA 31123, 31788  
VENTURER 31390  
VICTOR 30074  
WARDS 30189, 30014  
YAMAHA 30176, 30186, 30376, 31176, 31276, 31331, 31375, 31376, 31476, 31815, 32061  
ZENITH 30857, 31293

### AUDIO ACCESSORY CODES

ACCURIAN 31106  
ALTEC LANSING 30607, 31056  
APPLE 31115  
DLO 31155  
GPX 32113  
GRIFFIN 31891  
IDECK 31106  
IHOME 32152  
ILIVE 32113  
MONITOR AUDIO 31106

### CABLE BOX/CONVERTER CODES

ABC 00003, 00008  
ADB 02586  
AMINO 01602, 01822  
CISCO 01877, 00877  
COMCAST 01982  
DIGEO 01187  
DIRECTOR 00476  
GENERAL INSTRUMENT 00476, 00810, 00276, 00003  
GOLDSTAR 00144  
I3 MICRO 01602  
JERROLD 00476, 00810, 00276, 00003  
MEMOREX 00000  
MOTOROLA 01376, 00476, 00810, 00276, 01187, 01106  
MYRIO 01602, 01822  
PACE 01877, 00237, 00008  
PANASONIC 00000, 00107, 01982  
PARAGON 00000  
PHILIPS 01305, 00317  
PIONEER 01877, 00877, 00144, 00533  
PULSAR 00000  
QUASAR 00000  
RUNCO 00000  
SAMSUNG 00144  
SCIENTIFIC ATLANTA 01877, 00877, 00477, 00008  
SEJIN 01602  
SONY 01006  
STARCOM 00003  
SUPERCABLE 00276  
TORX 00003  
TOSHIBA 00000  
ZENITH 00000, 00525

### CABLE/DVR/PVR COMBO CODES

AMINO 01822  
CISCO 01877  
COMCAST 01982  
DIGEO 01187  
GENERAL INSTRUMENT 00810  
JERROLD 00810  
MOTOROLA 01376, 00810, 01187, 01106  
MYRIO 01822  
PACE 01877, 00237

PANASONIC 01982  
PIONEER 01877  
SCIENTIFIC ATLANTA 01877  
SONY 01006  
SUPERCABLE 00276

### DVD PLAYER CODES

ACCURIAN 20675  
ADVENT 21016  
AIWA 20641  
AKAI 20695, 20899, 21089  
ALCO 20790  
ALLEGRO 20869  
AMPHION MEDIA WORKS 20872  
AMW 20872  
APEX DIGITAL 20672, 20794, 20796, 20797, 20830, 21004, 21056, 21061  
ARRGO 21023  
ASPIRE DIGITAL 21168, 21407  
ASTAR 21489, 21678  
AUDIOVOX 20790, 21121  
B & K 20662  
BBK 21224  
BLUE PARADE 20571  
BOSE 22023  
BROKSONIC 20695, 20868  
CALIFORNIA AUDIO LABS 20490  
CINEA 20831  
CINEVISION 20876, 20833, 20869  
CITIZEN 20695, 21277  
COBY 20778, 20852, 21086, 21107, 21177, 21351  
CRAIG 20831  
CYBERHOME 20816, 20874, 21023, 21024, 21129, 21502, 21537  
D-VISION 21173  
DAEWOO 20784, 20705, 20833, 20869, 21169, 21172, 21234, 21242, 21443  
DAYTEK 20872  
DENON 20490, 20634  
DESAY 21407  
DIGITALMAX 21738  
DISNEY 20675, 21270  
DURABRAND 21127  
DVD2000 20521  
EMERSON 20591, 20675, 20821, 21268  
ENTERPRISE 20591  
ESA 20821, 21268, 21443  
FISHER 20670  
FUNAI 20675, 21268  
GATEWAY 21158  
GE 20522, 20815  
GO VIDEO 20744, 20715, 20741, 20783, 20833, 20869, 21075, 21099, 21144, 21148, 21158, 21304, 21443, 21730  
GOLDSTAR 20741  
GPX 20769  
GRADIENTE 20490

GRUNDIG 20539  
 HARMAN/KARDON 20582, 20702  
 HELLO KITTY 20831  
 HITACHI 20573, 20664, 21247  
 HITEKER 20672  
 HUMAX 21588  
 ILO 21348, 21472  
 INITIAL 21472  
 INSIGNIA 21268  
 INTEGRA 20571, 20627, 21769  
 JBL 20702  
 JENSEN 21016  
 JSI 21423  
 JVC 20558, 20623, 20867, 21164,  
 21275, 21550, 21602  
 JWIN 21049  
 KAWASAKI 20790  
 KENWOOD 20490, 20534  
 KLH 20790, 21149  
 KOSS 21423  
 LASONIC 21173  
 LECSON 21533  
 LENOXX 21127  
 LG 20591, 20741, 20869  
 LITEON 21058, 21158, 21440, 21656,  
 21738  
 LOEWE 20511  
 MAGNAVOX 20503, 20539, 20646,  
 20675, 20821, 21268, 21354, 21472,  
 21506  
 MARANTZ 20539  
 MCINTOSH 21533, 21273  
 MEMOREX 20695, 20831, 21270  
 MICROSOFT 20522, 22083  
 MINTEK 21472  
 MITSUBISHI 21521, 20521  
 NAD 20741  
 NEC 20785  
 NEXXTECH 21402  
 NORCENT 21003, 20872, 21107,  
 21265  
 ONKYO 20503, 20627, 21769  
 OPPO 20575, 21224  
 PANASONIC 20503, 20490, 20632,  
 20703, 21362, 21462, 21490, 21641,  
 21762  
 PHILCO 20675  
 PHILIPS 20503, 20539, 22056,  
 20646, 20675, 20854, 21260, 21267,  
 21340, 21354, 22084  
 PIANODISC 21024  
 PIONEER 20525, 20571, 20142,  
 20631, 20632, 21460  
 POLAROID 21061, 21086  
 POLK AUDIO 20539  
 PRESIDIAN 20675, 21738  
 PRIMA 21016  
 PROCEED 20672  
 PROSCAN 20522  
 PROVISION 20778  
 RCA 20522, 20571, 20790, 20822,

21022, 21132, 21193, 21769  
 RIO 20869  
 RJTECH 21360  
 ROTEL 20623, 21178  
 SAMPO 20698, 20752  
 SAMSUNG 20490, 20573, 20744,  
 20199, 20899, 21075  
 SANSUI 20695  
 SANYO 20670, 20695, 20873  
 SENSORY SCIENCE 21158  
 SHARP 20630, 20675, 20752, 21256,  
 22250  
 SHERWOOD 20633, 21043, 21889  
 SHINSONIC 20533  
 SONIC BLUE 20869, 21099  
 SONY 20533, 21533, 20864, 21033,  
 21070, 21431, 21516, 22043  
 SUNGALE 21074  
 SUPERSCAN 20821  
 SVA 20860, 21105  
 SYLVANIA 20675, 20821, 21268  
 SYMPHONIC 20675, 20821, 21268  
 TEAC 20790  
 TECHNICS 20490, 20703  
 THETA DIGITAL 20571  
 TIVO 21503, 21588  
 TOSHIBA 20503, 20695, 21045,  
 21154, 21503, 21588, 21769  
 TREDEX 20803, 20804  
 URBAN CONCEPTS 20503  
 VENTURER 20790  
 VIZIO 21064, 21226  
 VOCOPRO 21360  
 XBOX 20522, 22083  
 YAMAHA 20490, 20539, 20545  
 YAMAKAWA 20872  
 ZENITH 20503, 20591, 20741, 20869  
 ZOECE 21265

#### DVR/PVR CODES

ABS 21972  
 ALIENWARE 21972  
 CYBERPOWER 21972  
 DELL 21972  
 DIRECTV 20739  
 GATEWAY 21972  
 GO VIDEO 20614  
 HEWLETT PACKARD 21972  
 HOWARD COMPUTERS 21972  
 HP 21972  
 HUGHES NETWORK SYSTEMS  
 20739  
 HUMAX 20739  
 HUSH 21972  
 IBUYPOWER 21972  
 LINKSYS 21972  
 MEDIA CENTER PC 21972  
 MICROSOFT 21972  
 MIND 21972  
 NIVEUS MEDIA 21972  
 NORTHGATE 21972

PANASONIC 20614, 20616  
 PHILIPS 20739, 20618  
 PIONEER 21337  
 RCA 20880  
 REPLAYTV 20614, 20616  
 SAMSUNG 20739  
 SONIC BLUE 20614, 20616  
 SONY 20636, 21972  
 STACK 9 21972  
 SYSTEMAX 21972  
 TAGAR SYSTEMS 21972  
 TIVO 20739, 20618, 20636, 21337  
 TOSHIBA 21008, 21972, 21996  
 TOUCH 21972  
 VIEWSONIC 21972  
 VOODOO 21972  
 ZT GROUP 21972

#### SATELLITE SET-TOP BOX CODES

BELL EXPRESSVU 00775  
 CHAPARRAL 00216  
 DIRECTV 01377, 00566, 00639,  
 01639, 01142, 00247, 00749, 01749,  
 01856, 01076, 01442, 01640  
 DISH NETWORK SYSTEM 00775,  
 01505, 01775  
 DISHPRO 00775, 01505, 01775  
 EHOSTAR 00775, 01505, 01775  
 EXPRESSVU 00775, 01775  
 GE 00566  
 GENERAL INSTRUMENT 00869  
 GOI 00775, 01775  
 HITACHI 01250  
 HTS 00775, 01775  
 HUGHES NETWORK SYSTEMS  
 01142, 00749, 01749, 01442  
 JERROLD 00869  
 JVC 00775, 01775  
 MITSUBISHI 00749  
 MOTOROLA 00869  
 NEXT LEVEL 00869  
 PANASONIC 00247, 00701  
 PHILIPS 01142, 00749, 01749,  
 01076, 01442  
 PROSCAN 00566  
 RADIOSHACK 00869  
 RCA 00566  
 SAMSUNG 01377, 01142, 01276,  
 01442  
 SONY 00639, 01639, 01640  
 STAR CHOICE 00869  
 TIVO 01142, 01442  
 TOSHIBA 00749, 01749  
 ULTIMATETV 01640  
 VOOM 00869  
 ZENITH 01856

#### TV CODES

3M 11616  
 ACCURIAN 11803  
 ACTION 10873

ADMIRAL 10093, 10463  
 ADVENT 10761, 10783, 10815,  
 10817, 10842, 11933  
 AIKO 10092  
 AKAI 10812, 11675, 10060, 10702,  
 10030, 10672, 11207, 11676, 11903,  
 11935  
 ALARON 10179  
 ALBATRON 10700, 10843  
 AMBASSADOR 10177  
 AMERICA ACTION 10180  
 ANAM 10180  
 AOC 10030, 10185, 11365, 11590  
 AOMNI 11623  
 APEX DIGITAL 10156, 10748, 10879,  
 10765, 10767, 10890, 11217, 11943,  
 11991  
 ASTAR 11531, 11738  
 AUDIOVOX 10451, 10180, 10092,  
 10623, 10802, 10846, 10875, 11937,  
 11951, 11952  
 AVENTURA 10171  
 AXION 11937  
 BELL & HOWELL 10154  
 BENQ 11032, 11212, 11315  
 BOXLIGHT 10893  
 BRADFORD 10180  
 BROKSONIC 10236, 10463, 10180,  
 11911, 11929, 11935, 11938  
 BYD:SIGN 11309  
 CANDLE 10030, 10056  
 CARNIVALE 10030  
 CARVER 10054  
 CELEBRITY 10000  
 CELERA 10765  
 CHANGHONG 10765  
 CITIZEN 10060, 10030, 10092,  
 10056, 11935  
 CLAIRTONE 10185  
 CLARION 10180  
 COMMERCIAL SOLUTIONS 11447,  
 10047  
 CONCERTO 10056  
 CONTEC 10180, 10185  
 CRAIG 10180  
 CROSLEY 10054  
 CROWN 10180  
 CURTIS MATHES 10047, 10054,  
 10154, 10451, 10093, 10060, 10702,  
 10030, 10145, 10166, 10056, 10466,  
 11147, 11347  
 CXC 10180  
 CYTRON 11326  
 DAEWOO 10451, 10092, 11661,  
 10623, 10661, 10672  
 DELL 11264, 11080, 11403, 11863  
 DENON 10145  
 DENSTAR 10628  
 DIAMOND VISION 11996, 11997  
 DIGITAL LIFESTYLES 11765  
 DIGITAL PROJECTION INC. 11482



DUMONT 10017  
DURABRAND 10463, 10180, 10178,  
10171, 11034  
DWIN 10093  
DYNEX 11463, 11785, 11810  
ELECTROBAND 10000, 10185  
ELECTROGRAPH 11755, 11623  
ELECTROHOME 10463  
EMERSON 10154, 10451, 10236,  
10463, 10180, 10178, 10171, 11963,  
11944, 11929, 11911, 11394, 10623,  
10282, 10185, 10179, 10177  
EMPRES 11422, 11546, 11765  
ENVISION 10030, 10813, 11365  
EPSON 10833, 10840, 11122, 11290,  
11735  
ESA 10812, 10171, 11944, 11963  
FISHER 10154  
FUJITSU 10809, 10179, 10683,  
10853  
FUNAI 10180, 10171, 10179, 11271,  
11904, 11963  
FUTURETECH 10180  
GATEWAY 11755, 11756  
GE 11447, 10047, 10051, 10451,  
10178, 10021, 10282, 11347, 11917,  
11922  
GIBRALTER 10017, 10030  
GO VIDEO 10886  
GOLDSTAR 10178, 10030, 11926  
GRUNDIG 10683  
GRUNPY 10180, 10179  
H & B 11366  
HAIER 11034, 10768, 11748  
HALLMARK 10178  
HANNSPREE 11348, 11745  
HARLEY DAVIDSON 10179, 11904  
HARMAN/KARDON 10054  
HARVARD 10180  
HAVERMY 10093  
HELIOS 10865  
HELLO KITTY 10451  
HEWLETT PACKARD 11642, 11494,  
11089, 11101, 11502  
HISENSE 10748  
HITACHI 11643, 11145, 10145,  
10056, 10797, 11345, 11904, 11960  
HP 11642, 11494, 11089, 11101,  
11502  
HYUNDAI 11219, 11294  
ILO 11286, 11603, 11684, 11990  
INFINITY 10054  
INFOCUS 10752, 11430  
INITIAL 11603, 11990  
INSIGNIA 11564, 10171, 11204,  
11326, 11517, 11641, 11710, 11963,  
12002  
INTEQ 10017  
IX 10877  
JBL 10054  
JCB 10000  
JENSEN 10761, 10815, 10817,  
11299, 11933  
JVC 10053, 10650, 10731, 11253,  
11302, 11633, 11774, 11923  
KDS 11498  
KEC 10180  
KENWOOD 10030  
KLH 10765, 10767, 11962  
KONKA 10628, 10707, 11939, 11940  
KOST 11483  
KREISEN 10876  
KTV 10180, 10030, 10185  
LG 11423, 10178, 10700, 10829,  
10856, 11325, 11663, 11993  
LLOYD'S 11904  
LUXMAN 10056  
LXI 10047, 10054, 10154,  
10156, 10178  
MAG 11498  
MAGNAVOX 11454, 11866, 10054,  
10030, 10706, 11990, 11963, 11944,  
11931, 11904, 11525, 11365, 11254,  
11198, 10802, 10386, 10179  
MARANTZ 11454, 10054, 10030,  
10704, 10854, 10855, 11154, 11398  
MATSUSHITA 10250, 10650  
MAXENT 11755, 10762, 11211,  
11714, 11757  
MEGAPOWER 10700  
MEGATRON 10178, 10145  
MEI 10185  
MEMOREX 10154, 10463, 10150,  
10178, 10179, 10877, 11911, 11926  
MGA 10150, 10178, 10030  
MICRO 11436  
MIDLAND 10047, 10017, 10051  
MINTEK 11603, 11990  
MINUTZ 10021  
MITSUBISHI 11250, 10093, 10150,  
10178, 10836, 10868, 11522, 11917  
MONIVISION 10700, 10843  
MOTOROLA 10093, 10835  
MOXELL 10835  
MTC 10060, 10030, 10056, 10185  
MULTITECH 10180  
NAD 10156, 10178, 10056, 10866,  
11156  
NEC 10030, 10056, 10497, 10882,  
11398, 11704  
NETTV 11755, 10762  
NIKKO 10178, 10030, 10092  
NIKO 11581, 11618  
NORCENT 10748, 10824, 11089,  
11365, 11590, 11591  
NORWOOD MICRO 11286, 11296,  
11303  
NTC 10092  
OLEVIA 11610, 11144, 11240, 11331  
OLYMPUS 11342  
ONWA 10180  
OPTIMUS 10250, 10154, 10166,  
10650  
OPTOMA 10887, 11348, 11674  
OPTONICA 10093, 10165  
ORION 10236, 10463, 11463,  
10179, 11911, 11929  
PANASONIC 10250, 11480, 10051,  
10650, 11291, 11310, 11410, 11941,  
11946, 11947  
PENNEY 10047, 10156, 10051,  
10060, 10178, 10030, 10021, 11347,  
11926  
PETTERS 11523  
PHILCO 10054, 10030  
PHILIPS 11454, 10054, 10690,  
11154, 11483, 11744, 11961  
PILOT 10030  
PIONEER 11457, 10166, 10679,  
10866, 11260, 11398, 11717  
PLANAR 11496  
POLAROID 11523, 10765, 10865,  
11276, 11314, 11316, 11326, 11341,  
11498, 11766, 11962, 11991, 11992,  
12002  
PORTLAND 10092  
PRIMA 10761, 10783, 10815, 10817,  
11785, 11933  
PRINCETON 10700, 10717  
PRISM 10051  
PROSCAN 11447, 10047, 10466,  
11347, 11922  
PROTON 10178, 10466  
PROTRON 11320  
PROVIEW 10835, 11401, 11498  
PULSAR 10017  
PUNEET 11546  
QUASAR 10250, 10051, 10165,  
10650  
RADIOSHACK 10047, 10154, 10180,  
10178, 10030, 10056, 10165, 11904  
RCA 11547, 11447, 10047, 10090,  
10679, 11047, 11147, 11247, 11347,  
11781, 11917, 11922, 11948, 11953,  
11958, 12002  
REALISTIC 10154, 10180, 10178,  
10030, 10056, 10165  
REVOLUTIONHD 11623  
RHAPSODY 10185  
RUNCO 10017, 10030, 10497, 10603,  
11292, 11397, 11398, 11628, 11629,  
11639, 11679, 11717  
SAMPO 11755, 10030, 10762  
SAMSUNG 10812, 10060, 10702,  
10178, 10030, 10056, 10766, 10814,  
11060, 11312, 11575, 11903, 11959  
SANSUI 10463, 11409, 11904, 11911,  
11929, 11935  
SANYO 10154, 10088, 10799, 10893,  
11142  
SCEPTRE 10878, 11217, 11360,  
11599  
SCOTCH 10178  
SCOTT 10236, 10180, 10178, 10179,  
11711  
SEARS 10047, 10054, 10154, 10156,  
10178, 10171, 10056, 10179, 11904,  
11926  
SHARP 10818, 10093, 10165, 10386,  
10491, 10688, 10851, 11602, 11917  
SHENG CHIA 10093  
SHERWOOD 11399  
SOLE 10813, 11366, 11483, 11623  
SONY 11100, 10000, 10834, 11317,  
11685, 11904, 11925  
SOUNDESIGN 10180, 10178, 10179  
SOVA 11320, 11952  
SOYO 11520, 11546, 11826  
SPECTRONIQ 11498  
SQUAREVIEW 10171  
SSS 10180  
STARLITE 10180  
STUDIO EXPERIENCE 10843  
SUPERSCAN 10093, 10864  
SUPREME 10000  
SVA 10748, 10768, 10865, 10870,  
10872  
SYLVANIA 11864, 10054, 10030,  
10171, 11271, 11314,  
11394, 11931, 11944, 11963  
SYMPHONIC 10180, 10171, 11904,  
11944  
SYNTAX 11610, 11144, 11240, 11331  
TANDY 10093  
TATUNG 11101, 11285, 11286,  
11361, 11756  
TECHNICS 10250, 10051  
TECHNOL ACE 10179  
TECHVIEW 12004  
TECHWOOD 10051, 10056  
TECO 11040  
TEKNIKA 10054, 10180, 10150,  
10060, 10092, 10056, 10179  
TELEFUNKEN 10702, 10056  
THOMAS 11904  
TMK 10178, 10056, 10177  
TNCI 10017  
TOSHIBA 11524, 10154, 10156,  
11256, 10060, 12006, 11945, 11936,  
11935, 11918, 11704, 11656, 11635,  
11356, 11325, 11306, 11156, 10845,  
10832, 10822, 10650  
TOSONIC 10185  
TRUTECH 11723  
TVS 10463  
US LOGIC 11286, 11303  
VECTOR RESEARCH 10030  
VICTOR 10053  
VIDIKRON 10054, 11292, 11302,  
11397, 11398, 11628, 11629, 11633  
VIDTECH 10178  
VIEWSONIC 11755, 10797, 10857,  
10864, 10885, 11330, 11342, 11542,  
11578, 11627, 11640, 12014

VIORE 11207, 11684  
 VIZIO 11758, 10864, 10885, 11499,  
 11756  
 WARDS 10054, 10178, 10030, 10021,  
 10056, 10165, 10179, 10866, 11156  
 WAYCON 10156  
 WESTINGHOUSE 10000, 11712,  
 10451, 10885, 10889, 10890, 11092,  
 11282, 11577  
 WHITE WESTINGHOUSE 10463,  
 10623  
 WYSE 11365  
 YAMAHA 10030, 10769, 10797,  
 10833, 10839, 11526  
 ZENITH 10017, 10463, 10178, 11145,  
 10092, 11904, 11911, 11929

**TV CODES (LCD)**

**ACCURIAN 11803**  
**ACTION 10873**  
**AKAI 11675, 11676, 11935**  
**AOC 11365**  
**AOMNI 11623**  
**APEX DIGITAL 10890, 11217**  
**ASTAR 11531, 11738**  
**AUDIOVOX 10180, 10802, 10846,**  
**10875, 11937, 11951, 11952**  
**BENQ 11315**  
**BYD:SIGN 11309**  
**CITIZEN 11935**  
**DELL 11264, 11080, 11863**  
**DIGITAL LIFESTYLES 11765**  
**EMERSON 11394, 11963**  
**EMPREX 11422, 11546, 11765**  
**ENVISION 10813, 11365**  
**FUNAI 10171**  
**GO VIDEO 10886**  
**H & B 11366**  
**HAIER 11748**  
**HANNSPREE 11348, 11745**  
**HEWLETT PACKARD 11642**  
**HITACHI 11643**  
**HP 11642**  
**HYUNDAI 11219, 11294**  
**ILO 11286, 11603, 11684, 11990**  
**INITIAL 11603, 11990**  
**INSIGNIA 11564, 11204, 11517,**  
**11710, 12002**  
**IX 10877**  
**JENSEN 11299**  
**JVC 11774**  
**KREISEN 10876**  
**LG 11423, 10856, 11993**  
**MAGNAVOX 11866, 10802, 11198,**  
**11365, 11990**  
**MARANTZ 10855**  
**MAXENT 11755, 10762, 11211,**  
**11714, 11757**  
**MICRO 11436**  
**MINTEK 11603, 11990**  
**MITSUBISHI 11250**

**NETTV 10762**  
**NIKO 11581, 11618**  
**NORCENT 11365, 11591**  
**NORWOOD MICRO 11286, 11296**  
**OLEVIA 11610, 11144, 11240, 11331**  
**PANASONIC 11480, 10650, 11941**  
**PETTERS 11523**  
**PHILIPS 11454, 11483, 11744**  
**PIONEER 11260**  
**PLANAR 11496**  
**POLAROID 11523, 11276, 11316,**  
**11341, 11498, 11766**  
**PRIMA 11785**  
**PROTRON 11320**  
**PROVIEW 11401**  
**PUNEET 11546**  
**RCA 10047, 11781, 11958**  
**REVOLUTIONHD 11623**  
**RUNCO 11629**  
**SAMPO 11755, 10762**  
**SAMSUNG 10812, 10766, 10814,**  
**11575**  
**SANSUI 11409**  
**SANYO 11142**  
**SCEPTRE 10878, 11217, 11360,**  
**11599**  
**SCOTT 11711**  
**SHARP 10818, 10093, 11602**  
**SHERWOOD 11399**  
**SOLE 11366, 11483, 11623**  
**SONY 11685**  
**SOVA 11320**  
**SOYO 11520, 11546, 11826**  
**SUPERSCAN 10864**  
**SVA 10870**  
**SYLVANIA 11864, 10171, 11271,**  
**11314, 11394**  
**SYMPHONIC 10171**  
**SYNTAX 11610, 11144, 11240, 11331**  
**TATUNG 11286**  
**TECHVIEW 12004**  
**TECO 11040**  
**TOSHIBA 11524, 10822, 10845,**  
**11635, 11656, 12006**  
**TRUTECH 11723**  
**US LOGIC 11286**  
**VIDIKRON 11398, 11629**  
**VIEWSONIC 10857, 10864, 10885,**  
**11330, 11578, 11627, 11640, 12014**  
**VIORE 11684**  
**VIZIO 11758, 10864, 10885, 11756**  
**WESTINGHOUSE 11712, 10885,**  
**10889, 10890, 11282, 11577**  
**WYSE 11365**

**TV CODES (PLASMA)**

**AKAI 10812, 11675, 11207**  
**ALBATRON 10843**  
**AOC 11590**  
**AOMNI 11623**  
**BENQ 11032**

**DAEWOO 10661**  
**DELL 11264, 11863**  
**ELECTROGRAPH 11755, 11623**  
**ESA 10812**  
**FUJITSU 10809, 10683, 10853**  
**FUNAI 11271**  
**GATEWAY 11755, 11756**  
**H & B 11366**  
**HAIER 11748**  
**HELIOS 10865**  
**HEWLETT PACKARD 11642, 11089,**  
**11502**  
**HITACHI 11643, 10797**  
**HP 11642, 11089, 11502**  
**ILO 11684**  
**INSIGNIA 11564**  
**JVC 10731**  
**LG 11423, 10178, 10829, 10856**  
**MAGNAVOX 11866**  
**MARANTZ 10704, 11398**  
**MAXENT 11755, 11757**  
**MITSUBISHI 10836**  
**MONIVISION 10843**  
**MOTOROLA 10835**  
**MOXELL 10835**  
**NEC 11398, 11704**  
**NETTV 11755**  
**NORCENT 10824, 11089, 11590**  
**NORWOOD MICRO 11303**  
**PANASONIC 10250, 11480, 10650**  
**PHILIPS 10690, 11744**  
**PIONEER 11457, 10679, 11260,**  
**11398, 11717**  
**POLAROID 10865, 11276**  
**PRIMA 11785**  
**PROVIEW 10835**  
**PUNEET 11546**  
**REVOLUTIONHD 11623**  
**RUNCO 11398, 11679, 11717**  
**SAMPO 11755**  
**SAMSUNG 10812, 11312**  
**SOLE 11623**  
**SONY 10000, 11317**  
**STUDIO EXPERIENCE 10843**  
**SVA 10865**  
**SYLVANIA 11271, 11394**  
**TATUNG 11101, 11285, 11756**  
**TOSHIBA 10650, 11704**  
**US LOGIC 11303**  
**VIEWSONIC 11755, 10797**  
**VIORE 11207, 11684**  
**VIZIO 11758, 11756**  
**YAMAHA 10797**  
**ZENITH 10178**

**TV/DVD COMBO CODES**

**(CONTROLLED BY TV)**  
**ACCURIAN 11803**  
**ADVENT 11933**  
**AKAI 11675, 11935**  
**APEX DIGITAL 11943, 11991**

**AUDIOVOX 11937, 11951, 11952**  
**AXION 11937**  
**BROKSONIC 11935**  
**CITIZEN 11935**  
**DIAMOND VISION 11997**  
**DYNEX 11810**  
**EMERSON 11394, 11963**  
**ESA 11963**  
**FUNAI 11963**  
**HITACHI 11960**  
**ILO 11990**  
**INITIAL 11990**  
**INSIGNIA 11963, 12002**  
**JENSEN 11933**  
**KLH 11962**  
**KONKA 11939, 11940**  
**LG 11993**  
**MAGNAVOX 11866, 11963, 11990**  
**MAXENT 11714**  
**MINTEK 11990**  
**PANASONIC 11941**  
**PHILIPS 11961**  
**POLAROID 11523, 11766, 11962,**  
**11991, 12002**  
**PRIMA 11933**  
**RCA 11948, 11958, 12002**  
**SAMSUNG 11903**  
**SANSUI 11935**  
**SOVA 11952**  
**SYLVANIA 11864, 11394, 11963**  
**TECHVIEW 12004**  
**TOSHIBA 11524, 11635, 11935,**  
**12006**

**TV/DVD COMBO CODES  
(CONTROLLED BY DVD)**

**ADVENT 21016**  
**AKAI 20695**  
**APEX DIGITAL 20830**  
**AUDIOVOX 21121**  
**BROKSONIC 20695**  
**CITIZEN 20695**  
**EMERSON 20675, 21268**  
**ESA 21268**  
**FUNAI 21268**  
**HITACHI 21247**  
**ILO 21472**  
**INITIAL 21472**  
**INSIGNIA 21268**  
**JENSEN 21016**  
**MAGNAVOX 21268, 21472**  
**MINTEK 21472**  
**PANASONIC 21490**  
**PHILIPS 20854, 21260**  
**PRIMA 21016**  
**RCA 21022, 21193**  
**SAMSUNG 20899**  
**SANSUI 20695**  
**SYLVANIA 20675, 21268**  
**TOSHIBA 20695**



TV/VCR COMBO CODES  
(CONTROLLED BY TV)  
AMERICA ACTION 10180  
AUDIOVOX 10180  
BROKSONIC 11911, 11929  
EMERSON 10236, 11911, 11929  
FUNAI 11904  
GE 11917, 11922  
GOLDSTAR 11926  
HARLEY DAVIDSON 11904  
HITACHI 11904  
JVC 11923  
LLOYD'S 11904  
MAGNAVOX 11904, 11931  
MEMOREX 11926  
MITSUBISHI 11917  
ORION 11911, 11929  
PENNEY 11926  
RADIOSHACK 11904  
RCA 11917, 11922  
SAMSUNG 11959  
SANSUI 11904, 11911, 11929  
SEARS 11904, 11926  
SONY 11904, 11925  
SYLVANIA 11931  
SYMPHONIC 11904  
THOMAS 11904  
TOSHIBA 11918, 11936  
ZENITH 11904, 11911, 11929

TV/VCR COMBO CODES  
(CONTROLLED BY VCR)  
BROKSONIC 21479  
CITIZEN 21278  
CURTIS MATHES 21035  
DAEWOO 21278  
EMERSON 20593, 21278, 21479  
FUNAI 20000  
GE 20807, 21035, 21060  
GOLDSTAR 21237  
HARLEY DAVIDSON 20000  
HITACHI 20000  
LLOYD'S 20000  
MAGNASONIC 20593, 21278  
MAGNAVOX 20000, 20593, 21781  
MEMOREX 21237  
MITSUBISHI 20807  
OPTIMUS 20593  
ORION 21479  
PANASONIC 21035  
PENNEY 21035, 21237  
QUASAR 21035  
RADIOSHACK 20000  
RCA 20807, 21035, 21060  
SAMSUNG 21014  
SANSUI 20000, 21479  
SEARS 20000, 21237  
SONY 20000, 21232  
SYLVANIA 21781  
SYMPHONIC 20000, 20593  
THOMAS 20000

TOSHIBA 20845, 21145  
ZENITH 20000, 21479

VCR CODES  
ABS 21972  
ACCURIAN 20000  
ADVENTURA 20000  
AIWA 20037, 20000, 20124  
ALIENWARE 21972  
AMERICAN HIGH 20035  
AUDIOVOX 20037  
BROKSONIC 20184, 21479  
CALIX 20037  
CANON 20035  
CARVER 20081  
CITIZEN 20037, 21278  
CRAIG 20037  
CURTIS MATHES 20060, 20035,  
21035  
CYBERPOWER 21972  
DAEWOO 20045, 21278  
DELL 21972  
DIRECTV 20739  
DYNATECH 20000  
ELECTROHOME 20037, 20043  
ELECTROPHONIC 20037  
EMEREX 20032  
EMERSON 20037, 20184, 20000,  
20043, 20593, 21278, 21479, 21593  
FUJI 20035, 20033  
FUNAI 20000, 20593, 21593  
GARRARD 20000  
GATEWAY 21972  
GE 20060, 20035, 20807,  
21035, 21060  
GO VIDEO 20614  
GOLDSTAR 20037, 21237  
GRADIENTE 20000  
HARLEY DAVIDSON 20000  
HARMAN/KARDON 20081  
HEWLETT PACKARD 21972  
HITACHI 20000, 20089  
HOWARD COMPUTERS 21972  
HP 21972  
HUGHES NETWORK SYSTEMS  
20739  
HUMAX 20739  
HUSH 21972  
IBUYPOWER 21972  
INSTANT REPLAY 20035  
JVC 20067  
KEC 20037  
KENWOOD 20067  
KODAK 20035, 20037  
LINKSYS 21972  
LLOYD'S 20000  
LXI 20037  
MAGNASONIC 20593, 21278  
MAGNAVOX 20035, 20081, 20000,  
20593, 21593, 21781  
MARANTZ 20035, 20081

MARTA 20037  
MATSUSHITA 20035  
MEDIA CENTER PC 21972  
MEI 20035  
MEMOREX 20035, 20037, 20000,  
21237  
MGA 20043  
MICROSOFT 21972  
MIND 21972  
MITSUBISHI 20067, 20043, 20807  
MOTOROLA 20035  
MTC 20000  
MULTITECH 20000  
NEC 20067  
NIKKO 20037  
NIVEUS MEDIA 21972  
NORTHGATE 21972  
OLYMPUS 20035  
OPTIMUS 20037, 20593  
ORION 20184, 21479  
PANASONIC 20035, 20225, 20614,  
20616, 21035  
PENNEY 20035, 20037, 21035,  
21237  
PHILCO 20035  
PHILIPS 20739, 20035, 20081, 20618  
PILOT 20037  
PIONEER 20067, 21337  
POLK AUDIO 20081  
PRESIDIAN 21593  
PROSCAN 20060, 21060  
QUASAR 20035, 21035  
RADIOSHACK 20000  
RADIX 20037  
RANDEX 20037  
RCA 20060, 20807, 20880,  
21035, 21060  
REALISTIC 20035, 20037, 20000  
REPLAYTV 20614, 20616  
RICAVISION 21972  
SAMSUNG 20739, 20045, 21014  
SANSUI 20000, 20067, 21479  
SCOTT 20184, 20045, 20043  
SEARS 20035, 20037, 20000, 21237  
SHARP 20807  
SONIC BLUE 20614, 20616  
SONY 20035, 20032, 20033, 20000,  
20636, 21232, 21972  
STACK 9 21972  
SYLVANIA 20035, 20081, 20000,  
20043, 20593, 21593, 21781  
SYMPHONIC 20000, 20593, 21593  
SYSTEMAX 21972  
TAGAR SYSTEMS 21972  
TASHIKO 20037  
TEAC 20000  
TECHNICS 20035  
TEKNIKA 20035, 20037, 20000  
THOMAS 20000  
TIVO 20739, 20618, 20636, 21337,  
21996

TOSHIBA 20045, 20043, 20845,  
21008, 21145, 21972, 21996  
TOTEVISION 20037  
TOUCH 21972  
VECTOR 20045  
VIDEO CONCEPTS 20045  
VIDEOMAGIC 20037  
VIEWSONIC 21972  
VILLAIN 20000  
VOODOO 21972  
WARDS 20060, 20035, 20081, 20000  
XR-1000 20035, 20000  
ZENITH 20033, 20000, 21479  
ZT GROUP 21972

VIDEO ACCESSORY CODES  
ABS 01272  
ALIENWARE 01272  
AMINO 01481, 02482  
AT&T 00858  
BUFFALO 01739  
CYBERPOWER 01272  
D-LINK 01554  
GATEWAY 01272  
HEWLETT PACKARD 01272, 01267  
HOWARD COMPUTERS 01272  
HP 01272  
HUSH 01272  
IBUYPOWER 01272  
KOOLCONNECT 01481  
LINKSYS 01272, 01365  
MEDIA CENTER PC 01272  
MICROSOFT 02049, 01272  
MIND 01272  
MOTOROLA 01998, 00858  
NIVEUS MEDIA 01272  
NORTHGATE 01272  
RICAVISION 01272  
ROKU 01486  
SCIENTIFIC ATLANTA 00858  
SMC 01456  
SONY 01272, 01324, 01364  
STACK 9 01272  
SUREWEST 01481  
SYSTEMAX 01272  
TAGAR SYSTEMS 01272  
TOSHIBA 01272  
TOUCH 01272  
VIEWSONIC 01272  
VOODOO 01272  
XBOX 02049  
ZT GROUP 01272