


**Universal Easy Clicker Remote—LuminetSM and Standard Video Service
UR3-SR3**

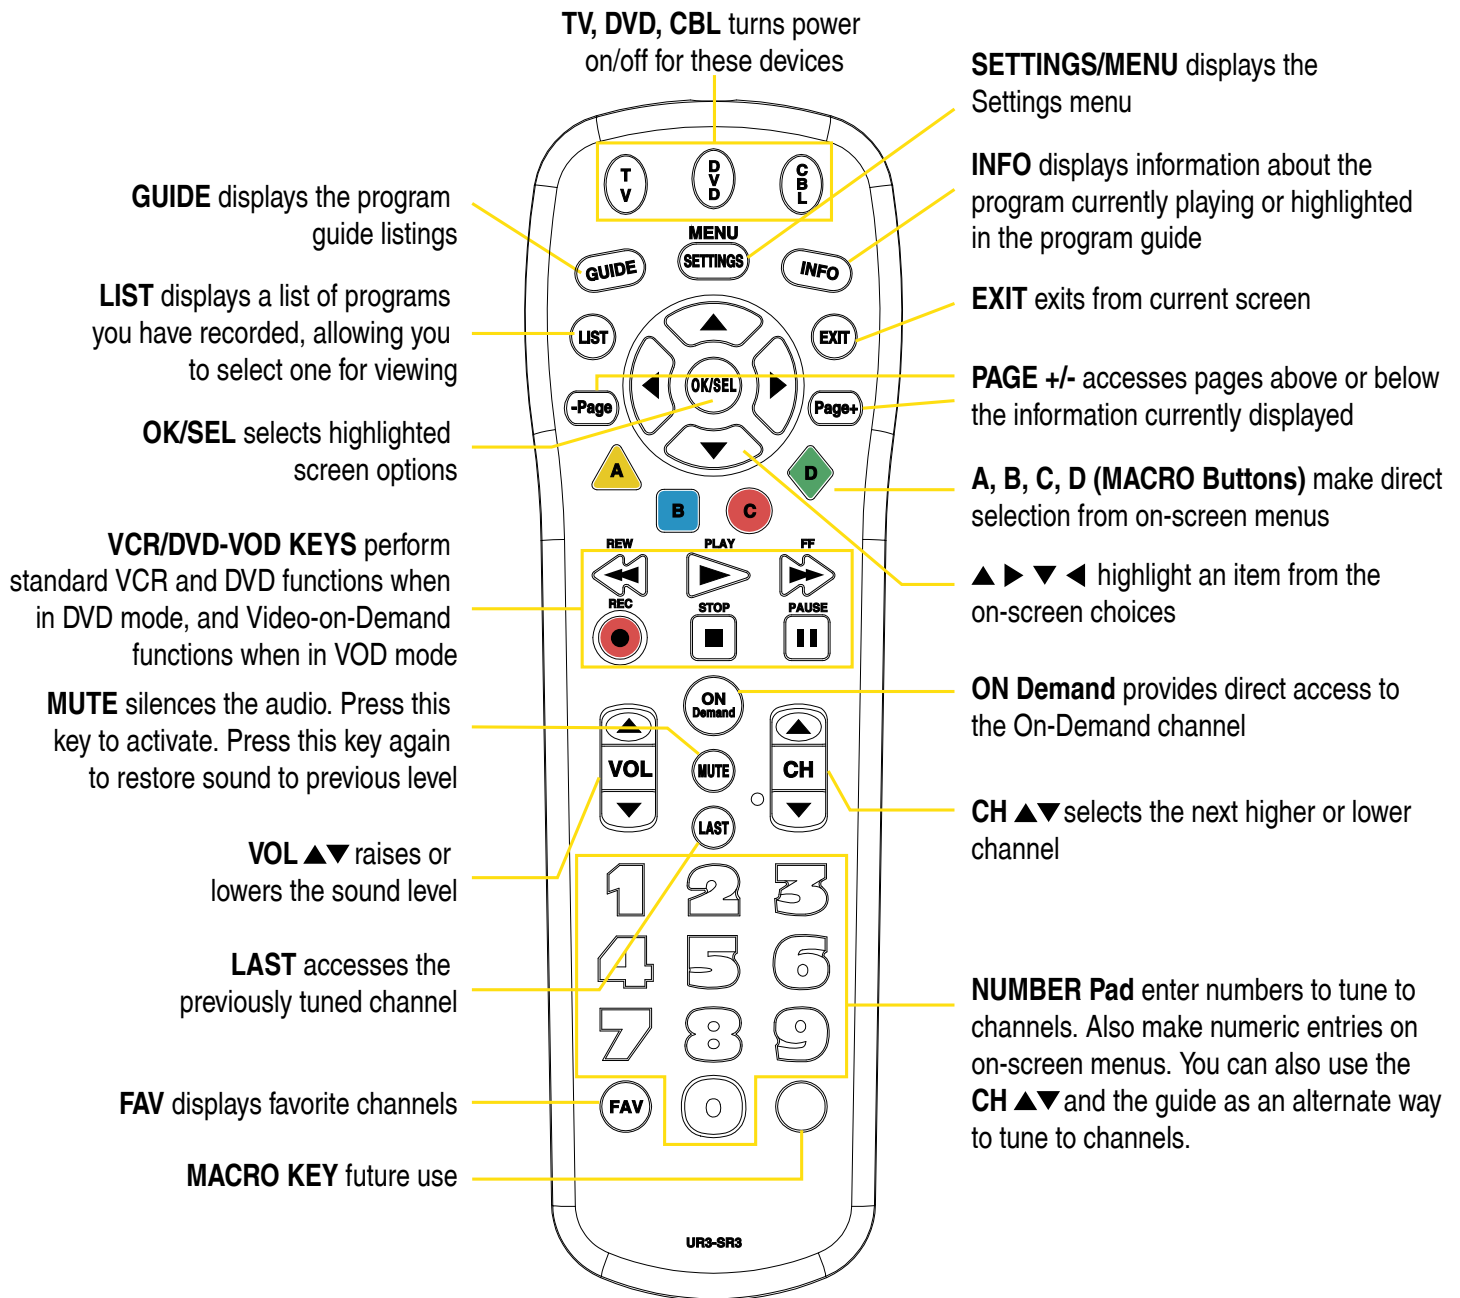



There are Three ways you can Program your Remote:

- Program your remote using the Quick Set-Up Method.
- Program your remote using the Manual Programming Method.
- Program your remote using the Auto-Search Method.

- In all sections, when you are instructed to press a [DEVICE] button, that means you should press either the CBL, TV, or DVD button, depending on which device you are programming the remote to operate.

Quick Set-Up Method Instructions

1. Turn **ON** the component you want to program (CBL, TV, or DVD).
2. Press and hold the [DEVICE] key for 5 seconds until the Device LED blinks once and stays on. Continue to hold the [DEVICE] key and **press the number key** assigned to your brand in the Quick Setup Code Table and release both [DEVICE] key and the **number key** to save the code. The Device LED will blink twice to confirm that the code is stored.
3. Point the remote control at the component.
4. Press the [DEVICE] button. If it turns off, it is programmed for your component. If it does not turn off, use the Pre-Programmed 3-Digit code Method or Scanning Method.
5. Repeat the steps above for all components (CBL, TV, DVD).

CBL			
Digit	Brand	Digit	Brand
0	Pace DTA	5	Cisco IPTV
1	SA/Cisco, Samsung, Pace Digital	6	ADB IPTV
2	Motorola Digital	7	Technicolor
3	Motorola DTA	8	Amino 140/540 IPTV
4	Evolution DTA	9	Motorola IPTV

TV			
Digit	Brand	Digit	Brand
0	Sanyo	5	Panasonic
1	Sony	6	Philips
2	Samsung	7	Hitachi
3	LG	8	Sharp
4	Toshiba	9	Vizio

DVD			
Digit	Brand	Digit	Brand
0	Hitachi	5	Panasonic
1	Sony	6	LG
2	Philips	7	JVC
3	Samsung	8	Denon
4	Philips Magnavox	9	Pioneer

Manual Method Programming Instructions

The remote control can be programmed by entering a three-digit code number that corresponds to particular brands and models of equipment. The three-digit code numbers are listed in the code tables sections of this instruction manual.

1. Turn **ON** the equipment that you want the remote control to operate Cable Box, TV, or DVD.
 2. Press and hold the [DEVICE] button and **OK/SEL** button simultaneously for three seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 20 seconds. The next step must be entered while the LED is on.
 3. Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there is more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.
- You can verify that you have selected the correct code by pressing the **MUTE** button. The equipment should turn on or off.
4. Store the three-digit code by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.
- Try all the functions on the remote control. If any of the functions do not operate as they should, repeat the instructions from Step 2 using the next three-digit code number from the same brand list.

Record your Component Setup Codes:

CBL Setup code Number	<input type="text"/>	<input type="text"/>	<input type="text"/>
TV Setup code Number	<input type="text"/>	<input type="text"/>	<input type="text"/>
DVD Setup code Number	<input type="text"/>	<input type="text"/>	<input type="text"/>

Auto-Search Method Programming Instructions

If none of the three-digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto-Search Method to find the correct three-digit code number for your equipment by following steps:

1. Turn **ON** the equipment that you want the remote control to operate Cable Box, TV, or DVD.
 2. Press the **[DEVICE]** button and the **OK/SEL** button simultaneously for three seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 20 seconds. The next step must be entered while the LED is on.
 3. Press the **CH ▲** or **CH ▼** button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the **CH ▲** or **CH ▼** button as soon as the equipment turns off.
- You can verify that you have selected the correct code by pressing the **MUTE** button. The equipment should turn on or off.
4. Press the same **[DEVICE]** button to store the code. The Device LED will blink twice to confirm that the code has been stored.

To find the Three-Digit code that was Programmed Using the Auto-Search Method

1. Press the appropriate **[DEVICE]** button and the **OK/SEL** button simultaneously for three seconds. The device LED will turn on for 20 seconds. The next step must be performed while the LED is on.
 2. Press the **INFO** button. The device LED will blink a number of times indicating the number of each digit for the code. Each digit is separated by a one second interval of the LED being off.
- Example: One blink, then three blinks, then eight blinks indicates the code number 138. Ten blinks indicates the number 0.

Programming for Advanced Functions

In the CABLE device mode, the A, B, C, and D and blank macro buttons can be programmed to act as a 'Macro' or Favorite Channel button. This allows you to program up to five 2-digit channels, four 3-digit channels, or three 4-digit channels that can be accessed with ONE button press.

- The A, B, C, and D buttons are not programmable if you have a Digital Cable Box made by Pace, Pioneer, or Scientific-Atlanta.

1. Press the **CBL** button to select the CBL mode.
 2. Press the **[MACRO]** button and **OK/SEL** button simultaneously for 3 seconds. The CBL button will turn on for 20 seconds.
 3. Enter the **2, 3, or 4-digit code** for the channel you want programmed first (for example, 007) using the Number Pad, then press the **STOP** button. Then enter the code for the next channel (for example, 050), then press the **STOP** button. Repeat this process for the third channel. The CBL button will blink once for each channel entered.
 4. Press the **CH ▲** button to store the channels that were selected. The CBL button will blink twice to confirm the storage of commands.
- To access the programmed channels, press the **[MACRO]** button once. This will bring up the first channel. Press once again and it will bring up the second channel. Press again and it will bring up the third channel.
- To erase the Macro programming and return to the original function, repeat all steps 1, 2, and 4 above.

Assigning the Volume and Mute Keys to a Different Device

By default, the **VOL ▲** or **VOL ▼** and **MUTE** keys operate through your TV. If you would like those keys to operate those functions on a different device, follow these steps:

1. Press the **OK/SEL** button and **CBL** button simultaneously for three seconds. The device LED will turn on for 20 seconds. The next step must be performed while the LED is on.
 2. Press the **VOL ▲** button. The device LED will blink.
 3. Press the **[DEVICE]** button corresponding to the device that you would like the volume and mute buttons to control. The device LED will blink twice to confirm the programming.
- If you wish to have the volume and mute keys operate your Cable Box, press the **CBL** button in Step 3.



Cable TV Codes		
Maker, Brand, or Name	Converter	Code Number
Cisco/SA	EXPLORER Series	001, 007
	8600X	011
	8600	021
	8540, 8570, 8590	022
	8500	023
	IPN Series	051
	LogicTV	209
Motorola	DCT Series (DVR Model)	002
	VIP Series	053
	DTA100	206
General Instrument	DCT Series, DCH Series, CFT2200	008
	DL4, DQNV/DRX, DPBB, DPV/DP/DQN, DRZ	027
Jerrold	BMC9012/BMC9022	006
	DSR470	005
	CFT2000	012
	DRZ	024
	DL4,DP(V),DQN(V),DPBB	025
	DRX	002
	Some Model	048
	DL4, DQNV/DRX, DPBB, DPV/DP/DQN, DRZ	027
ADB	ADB Series	054, 055
	ADB5810WX	115
	ADB5810W, ADB5721W NX	163
Amino	AmiNET Series	249
	A125, A130, A530	256, 257
	A110	260, 261
	A140, A540, A550	219
Arris	MP2000	172
	Frontier	216
AT&T	U-VERSE	051
Bell Fibe	PVR Slim	205
Cincinnati Bell	ZTE	194
	ZTE B700-V3	220
Cisco	RNG200	113
	IPN Series	051
	CIS330, CIS430	156
	DIGITAL TRANSPORT ADAPTER50	001

Cable TV Codes		
Maker, Brand, or Name	Converter	Code Number
Comcast	RNG200	113
	XFINITY	195
Confluent	CTG4-HDR	196
COX Digital Cable	Mini Box	223
Digeo	2056-MSX	153
Digital Multimedia Technology	DMT-205HD	222
DirecTV	Genie	238
	Sky AP HD/Sky Ap Jr	239
Dream	DM7020S	159
DSTV	DSTV [PVR1]	182
	DSTV [PVR2]	183
Dune	SMART B1, BE, D1, H1, HE, ME	184
	MINI, ULTRA	185
Duoson	TotalPlay	218
Entone	URC PLUS	155
	Kamai 651	221
	Kamai 500	210, 221
		213
	Kamai 45x	221
Evolution FTA	X0-01	158
Evolution	UNIVERSAL SD DTA	189
	UNIVERSAL HD DTA	215
Foxtel	IQ3	228
Hamlin	CR6000	042
	CR6600, 6800, CR83	043
	CRX5000	044
Homecast	NC3000C01	176
Horizon	Ziggo	225
Innovative Systems	IPTV Receiver	262
KAON	Mini	208
Layer3	C12516	226
Moxi	MOXI MEDIA CENTER	006
	MOXI HD DVR	052
	2056-MSX	153
Myrio	Evo Series	054, 055
Nagra	DCI-4136M	211

Cable TV Codes		
Maker, Brand, or Name	Converter	Code Number
Nagravision	HDDTA	201
nBox	ADB-5720SX	181
	ABD5720SX	186
nFusion	NUVENIO SD PHOENIX, NUVENIO HD, SOLARIS, NOVA	192
NowTV	NOWTV	114
NSC	IM781R	046
	IM781	047
Oak	SIGMAONE, P1, P2, P3, SIGMA 2000	037
	RTC56, RKDM	038
	SIGMA 2001, 2002	039
	SIGMA 450, 500, 550	040
Pace	500 Series	001, 007
	TDC Series	002
	DTA Series	113
	510	004
	DC550DR	214
	DC60X	206
	IPH8005M	217
Panasonic	140, 145, 170, 175	030
	110, 120, 130, 150, 160	031
Pico Digital	VMX1	224
Pioneer	VOYAGER Series	001, 007
	BA9000	013
	BA4100, 4200, 4500	028
	BA4100, 4200, 4500	029
Regency	All Models	045
Samsung	OCAP Models	001, 007
		130
SeaChange	ANALOG CONVERTER	190
	HD TCM	191
Sky	SKY+HD	230
	SKY HD	204
	Q	240
	AP HD, AP Jr	241
Sony	DHG-M55CV	003
Technicolor		365
Telnet	RC-RW100	154
Thompson	DCI1011GEM, DCI1011GEM1, DCI104ICS	365, 188

Cable TV Codes		
Maker, Brand, or Name	Converter	Code Number
Television	TV19	187
Tocom	5507	035
	5503A	036
Transparent Video Systems	4000A	193
Wegener	SMD 515	050
Windstream	KINETIC	212
ZeeVee	ZvMXE	227
Zenith	MN2500	032
	PM	033
	Z-TAC	034



CABLE-DVR (TIVO)

CHANNEL MASTER 859
DSTV 836, 837, 838, 839, 840
HUGHES 817, 821, 822, 823, 824,
825, 826, 827, 828
HUMAX 817, 818
ICREALTIME 834, 816
PHILIPS 790, 817, 821, 822, 823,
824, 825, 826, 827, 828, 835,
SPECO TECHNOLOGIES 879
TIVO 790, 817, 818, 821, 822, 823,
824, 825, 826, 827, 828, 858
TOSHIBA 817
ZUUMMEDIA 855
ZENITH 567

TV

ADMIRAL 072, 081, 160, 161, 096
AD NOTAM 672
ADVENT 147
AFFINITY 680
AIWA 141 145
AKAI 070, 146, 004, 148, 124, 226,
104, 108, 244
AKIO 103
ALARON 028
AMARK 112, 127
AMERICA ACTION 043
AMPRO 073, 167
ANAM 043, 054, 056, 080, 112, 131
AOC 058, 070, 004, 112, 245
APEX 092
APEX DIGITAL 015, 150, 037, 724
AQUAVISION 097, 100, 686
AUDIOVOX 076, 103, 043, 035, 078,
224
AUVIO 689
AVIELO 090, 628
AVION 223
AVERA 761
AXESS 711
BAYSONIC 043
BELL&HOWELL 072
BENQ 234
BRADFORD 043
BROKSONIC 096, 170
CAIRN 162
CANDLE 070, 002, 003, 004
CAPEHART 058
CARVER 164
CELEBRITY 001
CETRONIC 043
CIELO 714
CIIL 732
CINERAL 103, 120
CITIZEN 070, 002, 003, 004, 101,
103, 127
CLASSIC 043
COBY 640, 641, 671, 236
CONCERTO 004
CONTEC 043, 051

CONTINU-US 161, 746, 747
CORONADO 127
CRAIG 043, 054, 028
CROSLEY 164
CROWN 043, 127
CURTIS MATHES 070, 004, 101, 011,
072, 081, 120, 164, 127
CXC 043
DAEWOO 076, 103, 112, 004, 127,
016, 043, 044, 125, 120
DAYTRON 004, 127
DELL 041, 249
DENON 011
DIGITAL PROJECTION 090
DUMONT 004, 073
DWIN 131, 132, 161
DYNASTY 043
DYNATECH 062
FISHER 007, 057
ELECTROBAND 001
ELECTROHOME 024, 076, 127
ELEMENT 004, 110, 622, 690
EMERSON 005, 028, 043, 048, 076,
096, 155, 004, 051, 151, 153
154 127 121
ENVISION 070
EPSON 087, 228
ESA 031
EVERVUE 755
FREEMOTION 688
FUJITSU 164, 197, 028, 157, 149,
066, 217
FUNAI 028, 043, 052, 168
FUSION 642
FUTURETECH 043
GATEWAY 165, 031
GE 070, 073, 130, 144, 160, 161, 004,
008, 009, 034, 056
074 091 155 081 120
GEM 031
GIBRALTER 004, 073
GOLDSTAR 004, 106, 112, 127
GPX 674
GRUNPY 028, 043
HAIER 004, 116, 623, 236, 749
HALL MARK 004
HANNSPREE 099
HARLEY DAVIDSON 028
HARMAN KARDON 164
HARVARD 043
HISENSE 198, 021, 619, 630, 631,
236, 752
HITACHI 011, 007, 009, 004, 072,
010, 012, 023, 075, 158, 127, 174,
243, 670, 749
HP 027, 039, 098
HUMAX 122
HYPERION 242
HYUNDAI 049, 067
ILO 055, 096
INFINITY 164

INFOCUS 046, 215, 225, 233, 726,
733
INKEL 129
INSIGNIA 068, 069, 078, 096, 164,
168, 247
INTEQ 073
JBL 164
JCB 001
JCPENNEY 004, 008, 024, 030, 065,
070, 101, 160, 156, 127
JENSEN 013
JVC 038, 001, 034, 083, 195, 159,
227, 639
KENWOOD 070, 001
KLEGG 220
KLOSS 002, 059
KREISEN 202
KTV 070, 043, 154, 127
LG 004, 106, 112, 127, 086, 236, 648,
741
LODGENET 072
LOEWE 196, 164, 738
LOGIK 072
LUXMAN 004
LXI 007, 015, 052, 081, 160, 164
MAGNAVOX 070, 003, 004, 022, 059
060, 061, 063, 064, 127, 164, 094,
160, 056, 028, 035, 211, 205, 218,
050, 138, 232
MAJESTIC 072
MARANTZ 164, 070, 143, 169
MATSUI 164
MATSUSHITA 080
MAXENT 165
MEGATRON 004
MEMOREX 004, 007, 072, 028, 096
METZ 088
MGA 024, 070, 004, 042
MIDLAND 073
MINERVA 088
MINTEK 077
MINUTZ 008
MITSUBISHI 109, 024, 042, 004, 040,
146, 028, 124, 081, 200, 235
MOTOROLA 081
MTC 070, 004, 062, 101
MULTITECH 043
NAD 015, 025
NEC 070, 130, 134, 040, 056, 007,
019, 024, 004, 182, 140, 717, 758
NEXUS 620, 078
NIKEI 043
NIKKO 103
NIKO 175
NORCENT 211
NTC 103
NUVISION 084
OLEVIA 219, 004, 161, 144, 160
ONKING 043
ONWA 043
OPTIMUS 080

OPTOMA 029, 032
OPTONICA 019, 081
ORION 096, 201, 203, 204, 205, 028
PANASONIC 080, 034, 056, 164, 190,
230, 248, 237, 240, 664
PEERLESS-AV 723, 763
PHILCO 070, 003, 004, 024, 056, 059,
060, 063, 064, 127, 164
PHILIPS 164, 005, 038, 093, 127,
070, 003, 004, 059, 199, 218, 161,
232, 629, 727, 773
PIONEER 023, 025, 135, 176, 004,
018, 070, 183, 191, 208, 214, 182,
660
PLANAR 728, 742, 787, 788
POLAROID 026, 118, 119, 006, 110
PORTLAND 004, 103, 127
PRISM 034
PROSCAN 144, 160, 161, 167, 236
PROTON 004, 058, 171, 173, 193,
127, 163
PROTRON 102, 213, 004, 115
PROVIEW 110
PROX 092
PYLE HOME 661, 662
QUASAR 034, 056, 239
RADIO SHACK 004, 019, 127, 043
RCA 160, 161, 144, 156, 065, 070,
004, 023, 024, 056, 074, 152, 081,
209, 713, 751
REALISTIC 007, 019
REVOLUTION HD 220
RUNCO 072, 073, 130, 179, 180, 181,
182, 216, 194, 697
SAMPO 070, 004, 058, 165
SAMSUNG 192, 089, 004, 101, 127,
133, 160, 105, 070, 184, 185, 515,
655
SANSEI 120
SANSUI 096, 244, 078, 762
SANYO 007, 053, 057, 082, 020, 750
SCEPTRE 036, 699
SCOTCH 004
SCOTT 004, 005, 028, 043, 048, 127,
113
SEARS 004, 007, 015, 028, 030, 057,
082, 094, 160, 052, 164, 127
SEIKI 690
SELECO 189
SEMIVOX 043
SEMP 015
SEURA 704
SHARP 081, 019, 014, 028, 004, 022,
127, 684, 692, 735, 765, 766
SHERWOOD 128
SIGNATURE 072
SILO 001
SKYVUE 086
SOLE 177 178
SONY 001, 241, 633, 126, 139
SOUNDESIGN 003, 004, 028, 043

SOYO 163	VIDEO CONCEPTS 146	DYNEX 089	PARASOUND 083
SPECTRICON 112	VIDIKRON 188, 164, 182	EMERSON 235	PHILIPS 164, 074, 209, 176, 177, 191, 195, 127, 381
SPECTRONIQ 004	VIDTECH 004	ESA 235	PIONEER 187, 180, 175, 221, 223, 093, 364, 156, 377
SQUAREVIEW 052	VIEWSONIC 210, 211, 720	FUNAI 235	POLAROID 075, 084, 085
SSS 004 043	VIORE 055, 229, 192	GE 188 189	PRIMARE 250, 251
STARLITE 043	VISCO 110	GOLDSTAR 182 194	PROCEED 172
SUNBRITE 633, 634, 635, 236, 238, 772	VIZIO 236, 031, 624, 004, 625, 675	GO VIDEO 228, 182, 252, 253, 254	PROSCAN 188, 189
SUPRE MACY 002	WARDS 004, 064, 164, 008, 009, 019, 028, 060, 061, 063, 072, 074, 070, 127	GRADIENTE 243	RCA 188, 189, 086
SUPREME 001	W BOX TECHNOLOGIES 731	HARMAN KARDON 217	SANSUI 201
SVA 046	WESTINGHOUSE 076, 036, 221, 222, 001, 280, 690, 695	HITACHI 181	SANYO 215
SYLVANIA 070, 003, 059, 060, 063, 064, 127, 160, 164, 044, 056, 168, 121, 231	WINBOOK 079	HITEKER 197	SAMSUNG 183, 228, 193, 205, 073, 152, 241, 380
SYMPHONIC 052, 168	YAMAHA 004, 070, 206, 20	INSIGNIA 078, 235, 085, 182, 178, 089, 385	SENSORY SCIENCE 254, 255
SYNTAX OLEVIA 219, 004, 161, 144, 160	YORK 004	INTEGRA 208, 236, 238, 128	SHARP 174
TANDY 081	YUPITERU 043	JVC 185	SHERWOOD 083, 129 361
TATUNG 056, 062	ZENITH 011, 072, 073, 095, 103, 096	KENWOOD 166	SONY 077, 190, 213, 168, 118, 119, 120, 121, 126, 091, 363, 368, 378, 382
TCL 705, 749	ZONDA 112	KISS 237	SPECTRONIQ 088
TECHNICS 034, 080		KLH 230	SUPERSCAN 235
TECHNOL ACE 028	DVD	KOSS 243	SV2000 235
TECHVIEW 246	ADCOM 203	KRELL 218	SYLVANIA 235
TECHWOOD 004	AIWA 210, 214	LEXICON 216	SYMPHONIC 235
TEKNIKA 002, 003, 004, 024, 028, 043, 072, 101, 103, 164, 127	AKAI 239	LG 182, 194, 105, 090	TAG MCLAREN 202
TELEFUNKEN 244	ALPINE 179	LITEON 150	TASCAM 185
TELERENT 072	ANTHEM 361	MAGNAVOX 178, 191, 195, 235, 386	TECHNICS 173
TERA 172	APEX DIGITAL 240, 197, 247, 248, 196	MARANTZ 176, 177, 135	THETA DIGITAL 187
THOMPSON 166	ARCAM 165, 148, 374	MCINTOSH 167	TOSHIBA 169, 171, 191, 206, 227, 201, 236, 356
TILEVISION 663	AUDIOVOX 075	MEMOREX 222	TRUTECH 151
TMK 004	BOSE 244, 245	MERIDIAN 200	VENTURER 229
TNCI 073	CAMBRIDGE AUDIO 224, 145, 360	MINTEK 240, 196	VINC 220, 087
TOSHIBA 015, 030, 007, 040, 062, 101, 142, 045, 137, 703	CARY AUDIO DESIGN 249, 149	MITO 229	VIZIO 375
TOTEVISION 127	CLASSE 242	MITSUBISHI 186	YAMAHA 199, 204, 246, 184, 192, 334, 383
TRUTECH 212	COBY 206	MOXI 112	ZENITH 182, 194
UNIVERSAL 008, 009	CYBERHOME 170, 212	MYRYAD 211	
UPSTAR 708	DAEWOO 170	NAD 198, 182, 092	
VENTURER 236	DENON 226, 184, 225, 358	ONKYO 207, 236, 128	
	DUNE 366	OPPO 125	
	DURABRAND 235	OPTIMUS 187	
		ORITRON 243	
		PANASONIC 076, 219, 173, 184, 192, 103, 104, 379	

For TV/DVD combination units, please use the following steps to operate the volume control:

1. Press the **CBL** button and **OK/SEL** button simultaneously for three seconds. The device LED will turn on for 20 seconds. The next step must be performed while the LED is on.
2. Press the **VOL ▲** button.
3. Press the **DVD** button. The CBL device LED will blink twice to confirm the programming.